



22	4	Washer	Bricka		05-02-101
21	4	Screw	Skruv		05-04-128
20	5	Screw	Skruv		05-04-46
19	1	Screw	Skruv		See table
18	2	Plug	Plugg		05-03-122
17	1	Key	Nil		05-03-124
16	2	Retaining ring	Låsring		05-34-108
15	1	Retaining ring	Låsring		05-34-118
14	2	Ball bearing	Kullager		05-08-504
13	1	Mech. seal	Mek. tätning		05-20-118
12	1	V-ring	V-ring		05-19-505
11	1	Lip seal	Läpp tätning		05-29-118
10	1	Spacer	Distans		01-42747
9	1	Pedestal	Lagerfot		01-13020
8	1	Wear plate	Slitbricka		01-42423
7	1	Pin	Stift		01-42426
6	1	Gasket	Packning		01-42424
5	1	Impeller	Impeller		See table
4	1	Cam	Kam		See table
3	1	Shaft	Axel		01-35137
2	1	End cover	Lock		01-42422-1
1	1	Body	Pumphus		See table
Pos. Qty. Description		Material		Dimension Drawing nr.	

PUMP NO	PUMP TYPE	DESCRIPTION	THICKNESS	NO	SCREW	IMPELLER	BODY	THREAD
PUMP REPAIRING	PUMPTYP	BENÄMNING	TJOCKLEK	NR	SÄRV	IMPELLER	PUMPHUS	LAGRINGS
0-13026-1	F9B-3000	V1	8	01-43137	05-04-108	08-802 B	0-11358-1	R 7"
0-13026-2	F9B-3000	V2	5,2	01-43138	05-04-107	08-804 B	0-11358-1	R 7"
0-13026-3	F9B-3000	V3	8	01-43137	05-04-108	08-804 B	0-11358-1	R 7"
0-13026-4	F9B-3000	V4	5,2	01-43138	05-04-107	08-804 B	0-11358-1	R 7"
0-13026-5	F9B-3000	V5	8	01-43137	05-04-108	08-802 B	0-11358-2	R 7"
0-13026-6	F9B-3000	V6	5,2	01-43138	05-04-107	08-804 B	0-11358-2	R 7"
0-13026-7	F9B-3000	V7	8	01-43137	05-04-108	08-802 B	0-11358-2	R 7"
0-13026-8	F9B-3000	V8	5,2	01-43138	05-04-107	08-804 B	0-11358-2	R 7"
0-13026-9	F9B-3000	V9	8	01-43137	05-04-108	08-802 B	0-11358-2	R 7"
0-13026-10	F9B-3000	V10	5,2	01-43138	05-04-107	08-804 B	0-11358-2	R 7"
0-13026-11	F9B-3000	V11	8	01-43137	05-04-108	08-802 B	0-11358-2	R 7"
0-13026-12	F9B-3000	V12	5,2	01-43138	05-04-107	08-804 B	0-11358-2	R 7"

4	05-04-46	08-05-04-148	031025	4,5
3	0-13026-7	05-04-128	031025	4,5
2	0-13026-4	05-04-108	031025	4,5
1	0-13026-1	05-04-108	031025	4,5

Multipurpose