


### Split Case Pumps - Horizontally Mounted

#### Horizontal Split Case - Mechanical Seal, Grease Lubricated

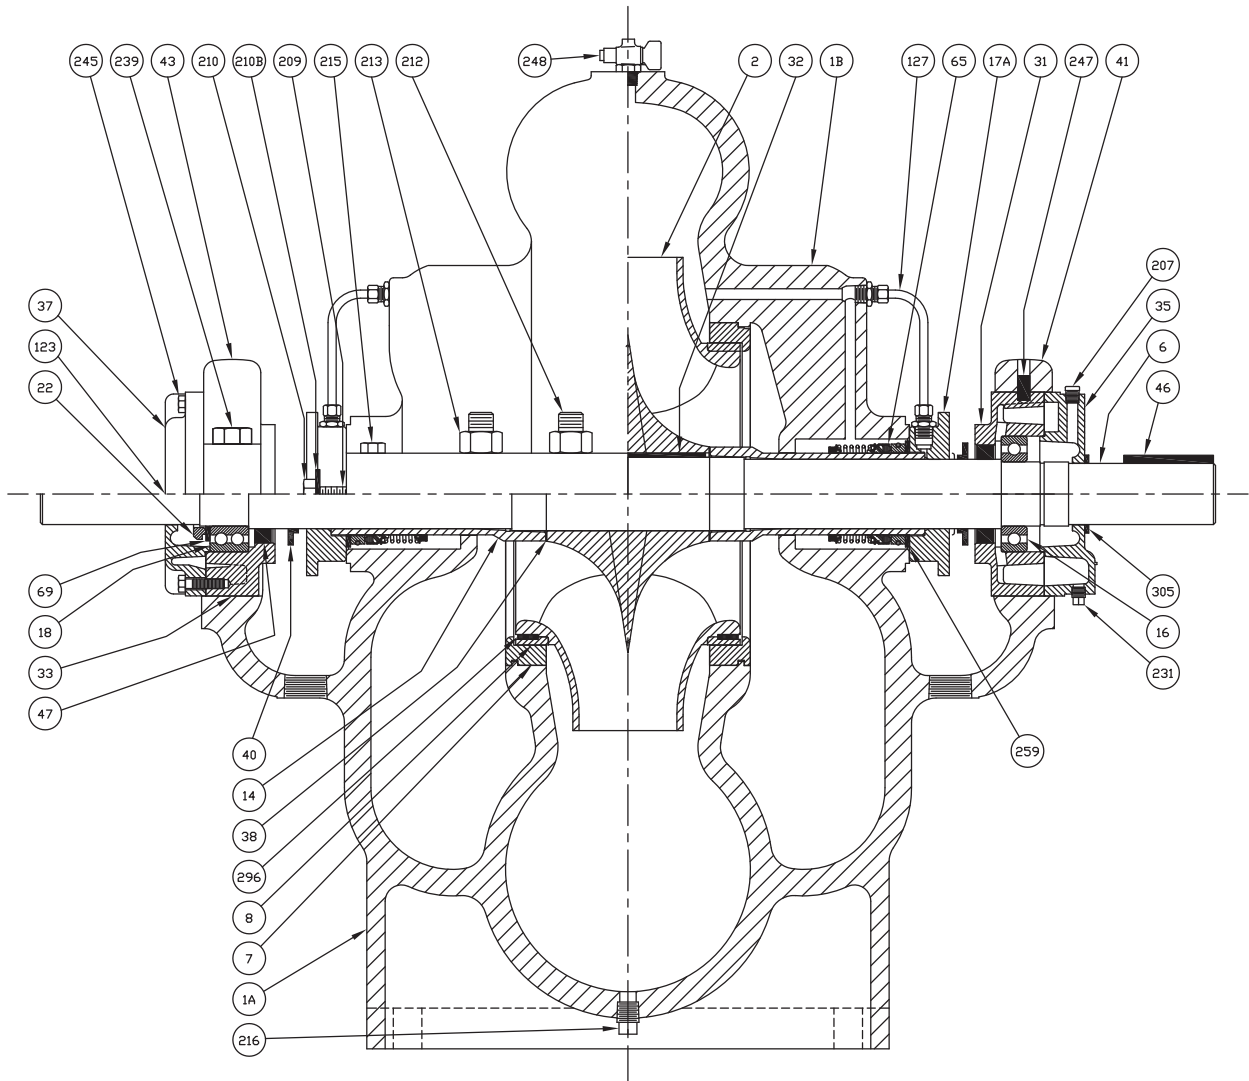

Item No.	Name of Part	Item No.	Name of Part	Item No.	Name of Part
1A	Lower Half Casing	35	Bearing Cover (Inboard)	210	Nuts
1B	Upper Half casing	37	Bearing Cover (Outboard)	212	Studs
2	Impeller	38	Shaft Sleeve Gasket	213	Nuts
6	Pump Shaft	40	Deflector	215	Cap Screws
* 7	Casing Ring	41	Bearing Cap (Inboard)	216	Pipe Plug
* 8	Impeller Ring	43	Bearing Cap (Outboard)	231	Pipe Plug
* 14	Shaft Sleeve	46	Coupling Key	239	Cap Screws
* 16	Ball Bearing (Inboard)	47	Lip Seal	245	Cap Screws
* 17A	Seal Cap	* 65	Mechanical Seal	246	Dowel Pin
* 18	Ball Bearing (Outboard)	69	Lock Washer	247	Dowel Pin
22	Lock Nut	* 73	Parting Gasket	248	Pet Cock
29	Lantern Ring	123	Bearing End Cover	* 259	Seal Gasket
31	Bearing Housing (Inboard)	127	Seal Piping	263	Pipe Plug (Socket Head) when specified
32	Impeller Key	207	Grease Fitting	296	Set Screws
33	Bearing Housing (Outboard)	209	Swing Bolt	305	Forsheda Ring

\* Recommended Spare Parts