

ITEM NO.	PART NUMBER <sup>1</sup>	QTY <sup>2</sup>
1	BEARING LOCK NUT	1
2	BEARING LOCK WASHER	1
3	BEARING CAP-OUTER	1
4	SET SCREW	1
5	BEARING CAP-INNER	1
6	HEX HEAD CAP SCREW	
7	BEARING CARRIER	1
8	SERIAL NUMBER PLATE	1
10	HOUSING GASKET	2
11	KEY	1
13	BALL BEARING	1
16	BRACKET ASSEMBLY 4	1
17	PIPE PLUG	2
20	COVER <sup>3</sup>	1
21	IDER PIN <sup>3</sup>	1
22	HOUSING, NO FLANGES	1
23	IDLER ASSEMBLY <sup>4</sup>	1
24	ROTOR ASSEMBLY	1
30	FOOT	1
40	PORT	2

ITEM NO.	PART NUMBER 1	QTY <sup>2</sup>
41	PORT GASKET	2
42	SOCKET HEAD CAP SCREW	
60	PACKING SET <sup>5</sup>	1
61	GLAND <sup>5</sup>	1
64	NPT PIPE PLUG <sup>5</sup>	
65	NPT PIPE PLUG <sup>5</sup>	
66	FLAT WASHER	
67	STUD	2
68	HEX NUT	2
71	BONNET GASKET	1
72	JAM NUT	1
73	RELIEF VALVE CAP	1
74	ADJUSTING SCREW	1
75	RELIEF VALVE CAP GASKET	1
76	BONNET	1
77	SPRING GUIDE	1
78	SPRING	1
79	RELIEF VALVE BODY	1
80	POPPET	1
81	HEX HEAD CAP SCREW	

- 1. WHEN ORDERING PARTS, PROVIDE **PUMP SERIAL NUMBER** AND **PART DESCRIPTION** TO CUSTOMER SERVICE.
- 2. SOME HARDWARE QUANTITIES NOT SHOWN AS THEY VARY WITH PUMP MODEL.
- 3. COVER AND IDLER PIN ARE ONLY SOLD AS AN ASSEMBLY.
- 4. REPLACEMENT BUSHINGS ARE AVAILABLE AS SPARE PARTS.
- 5. FOR MECHANICAL OR CARTRIDGE SEAL PUMPS THESE PARTS WILL CHANGE.