



<b>4122 Pump</b>		
<b>Item</b>	<b>Part Number</b>	<b>Description</b>
1	P100-21-H	screw (8)
2	00L6-8910	cover assembly
	1M31	pin
3	0B34-.002	gasket
	0B34-.005	gasket
4	00L5-8350	idler assembly
5	0RLE20	housing
	0RLEV20-RH	housing
	0RLEV20-LH	housing
15	00LE24-8910	rotor
15a	00LE24-A-8910	modification "A" rotor
16	P206-34	retaining ring
17	1LA71-8910	bushing
18	1LA9-7-0920	Viton seal
19	P701-34-77	Viton O ring
20	1LA11	housing plug

<b>Relief Valve Option</b>		
<b>Item</b>	<b>Part Number</b>	<b>Description</b>
6	0LV58-X201	plunger
7	0LWW63	standard spring (55-120)
	0C62-X201	optional spring (25-34)
	0C62-X299	optional spring (35-54)
	0LWWH63	optional spring (121-169)
	0LPV63	optional spring (170-374)
	0LV63X	optional spring (375-500)
8	30EN92	retainer
9	P103-11	adjusting screw
10	30F64-X201	valve cap gasket
11	0LWW56	valve cap gasket
12	30LE64-A	cap cover gasket
13	30LE528	nut
14	30LE56	acorn nut

<b>Ball Bearing Option</b>		
<b>Item</b>	<b>Part Number</b>	<b>Description</b>
20a	1LAK37	housing plug
20b	0LK511-E	ball bearing