

# Model 12210-Series

## **SELF-PRIMING PUMP**

**FEATURES** 

**Body:** Bronze

Impeller: Jabsco Neoprene or Nitrile Compound

Seal: Lip Type

**Motor:** 115 Volt AC with Replaceable Brushes,

Stainless Steel Shaft, 6' cord, three prong grounding plug

**Ports:** 3/8" Internal Pipe Thread and Adaptors

for 3/4" garden hose thread

**Height:** 3-5/8" **Width:** 4" **Length:** 6-7/8"

Weight: 5 lb (2.3 kg)(approx.)

## **VARIATIONS AVAILABLE**

MODEL NO. DESCRIPTION **12210-0001** Neoprene Impeller

12210-0003 Nitrile (oil resistant) Impeller

### **APPLICATIONS**

INDUSTRIAL: Transferring liquids. Velocity-mixing. Pumping coolants. Pumping waste water to sewer. Cellar, yard and sump drainage. Cooling Heliarc welding equipment.

MARINE: Washing down decks and docks. Water for ship's service supply. Pumping out crank-case oil.

FARMING: Pumping water for stock, poultry houses, farmhouse. Pumping water from wells and cisterns. Pumping liquid ballast into tractor tires. Pumping water from flooded basements.

PLUMBING AND HOME EMERGENCY USE: Pumping out flooded basements, cesspools, sumps, etc. Draining water heaters and water closets. Draining laundry tubs below sewer level. Removing water trapped between walls, draining inaccessible places when pipes break or leak. Draining fishing ponds and garden pools. Removing sludge, lyewater and other caustics from stopped up drains and sinks.

## **OPERATING INSTRUCTIONS**



Explosion hazard. Do not use where flammable vapors are present. To do so can cause an explosion resulting in injuryor death.

 INSTALLATION – Pump may be mounted at any angle without loss of efficiency. Suggested mounting is horizontal or with pump head down. The inlet port is the right hand port when looking at the end cover.



2. DRIVE – Direct.


- SELF-PRIMING Pump will produce a suction lift approaching 5 feet when dry and a lift up to 20 feet when primed. BE SURE SUCTION LINES ARE AIRTIGHT.
- RUNNING DRY Unit depends on liquid pumped for lubrication. DO NOT RUN DRY for more than 30 seconds. Lack of liquid will damage the impeller.
- 5. NOTICE Do not pump solvents, thinners, highly concentrated or organic acids. If corrosive fluids must be handled consult Jabsco Chemical Resistance Table (available on request from ITT Jabsco). Pump life will be prolonged if pump is flushed with water after each use or after each work day.
- 6. DUTY The "Handi-Puppy" is designed for intermittent duty in applications such as: transferring liquids; draining water heaters and water closets; pumping water from basements and other applications which require a few hours of continuous operation.
- 7. TEMPERATURES Neoprene 45°F (7.2°C) to 180°F (82.2°C), Nitrile 50°F (10°C) to 180°F (82.2°C).
- 8. FREEZING WEATHER Drain unit by loosening end cover plate.

#### **HEAD CAPACITY TABLE**

PSI	FEET	GPM	
4.3	10	3.4	
8.7	20	3.2	
13.0	30	2.9	
17.4	40	2.0	

Table shows approximate Head-Flow for new pump in U.S. gallons per minute.

Model 12210-Series

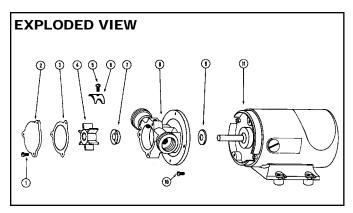

## **PARTS LIST**

		PART	
KEY	DESCRIPTION	NUMBER	QTY.
1	Screw - End Cover (3 per kit)	91002-0090	1
2	End Cover	12076-0000	1
3	Gasket*	7828-0000	1
4	Impeller - Neoprene*	1414-0001	1
	Nitrile	1414-0003	
5	Screw (Cam)	91002-0010	1
6	Cam	8089-0000	1
7	Seal*	93000-0100	1
8	Body	7824-0000	1
9	Slinger	6342-0000	1
10	Screw - Motor (2 per kit)	98019-0020	1
11	Motor and Base Assy.	9195-0004	1
	Replacement Pump Hea Neoprene Impeller	ad 9040-0001	
	Replacement Pump Hea	ad 9040-0005	
	Service Kit, Neoprene	90092-0007	
	Service Kit, Nitrile	90092-0004	
	†Brush Repair Kit with		
	White Brush Caps	42626-0001	

<sup>\*</sup> Parts contained in Service Kit.

#### **DISASSEMBLY**

- 1. Remove end cover screws, end cover and gasket.
- Withdraw impeller.
- 3. Loosen cam screw and remove cam.\*

## **DISASSEMBLY** (Cont.)


- 4. Lossen and remove two slotted hex screws which attach body to motor.
- 5. Tap body lightly between ports and remove body from motor.
- 6. Remove seal from body cavity.

NOTE: Do not tamper with or disassemble motor.

#### **ASSEMBLY**

- 1. Lubricate seal. Install in cavity with open side of seal facing impeller.
- 2. Lubricate motor shaft and install body on motor.
- Apply a dab of waterproof sealant to top of cam and reinstall and attach it with cam screw.\*
- 4. Lubricate impeller bore and aligning flat in impeller with flat on motor shaft, install impeller.
- 5. Install gasket, end cover and screws.

#### **BRUSH REPLACEMENT**

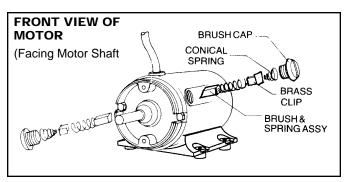

Replacement brush kit includes 2 each brush and spring assemblies, brass clips, conical springs, and caps.

Remove old brush assemblies and replace in order shown above. Make sure curvature on end of brush is pointed in direction shown.

THE PRODUCTS DESCRIBED HEREIN ARE SUBJECT TO THE JABSCO ONE YEAR LIMITED WARRANTY, WHICH IS AVAILABLE FOR YOUR INSPECTION UPON REQUEST.

Form: 43000-0015

## Jabsco



U.S.A. Jabsco 1485 Dale Way, P.O. Box 2158 Costa Mesa, CA 92628-2158 Tel: (714) 545-8251 Fax: (714) 957-0609 UNITED KINGDOM Jabsco Bingley Road, Hoddesdon Hertfordshire EN11 OBU Tel: +44 (0) 1992 450145 Fax: +44 (0) 1992 467132 CANADA Fluid Products Canada 55 Royal Road Guelph, Ontario N1H 1T1 Tel: (519) 821 -1900 Fax: (519) 821-2569

JAPAN NHK Jabsco Company Ltd. 3-21-10, Shin-Yokohama Kohoku-Ku, Yokohama, 222 Tel: 045-4758906 Fax: 045-475-8908 GERMANY Jabsco GmbH Oststrasse 28 22844 Norderstedt Tel: +49-40-53 53 73 -0 Fax: +49-40-53 53 73 -11

<sup>&</sup>lt;sup>†</sup> Brush Kits for motors manufactured prior to 1982 with black brush caps are no longer available.

<sup>\*</sup>Cam removal and reinstallation required only when replacing cam.