

# BARE SHAFT PEDESTAL FLEXIBLE IMPELLER PUMP

## FEATURES

- Carbon /Ceramic mechanical seal
- Sealed for life spaced bearings
- 1" NPT or 1" BSP ports
- Multi position mounting foot
- Standard pressure Jabsco neoprene impeller
- Automotive electromagnetic clutch

## MODEL RANGE

Pump Model	Port Size
52580-2001	1" BSP
52580-9001	1" NPT

# APPLICATION

**Marine**; engine cooling, bilge pumping, washdown and deck flooding, ballast transfer, general purpose pump, fire fighting.

**Industrial**; circulation and transfer of water, sump drainage, cellar drainage, emergency pumping.

**Farming/Agriculture**; waste water removal, shallow well pump, ditch drainage.



Models 52580-Series



**WARNING:** Do not use any Jabsco pump for petrol, petroleum products or any products with a flash point below 37°C (98°F), explosion or death may occur.



Injury hazard. Exposed pulleys and belts can cause injury. Install shield around pulleys and belts. Stay clear while machinery is operating.




Do NOT run dry.

## INSTALLATION

Pumps must be securely mounted on a rigid surface. Pumps can be mounted in any position. If mounted vertically, ensure the bearings are above the pump head to ensure long life.

The rotation of the pump shaft determines the location of the inlet and outlet port. All pipework must be supported to avoid stress on the pump. Suitable fittings must be used to connect the piping to the pump and sealed accordingly. Inlet pipework must be either rigid or reinforced to avoid collapsing under vacuum.

Excessive belt tension will result in premature bearing failure. The belt should be set to allow 16mm (1/2") of movement over 1m (3ft) of span when pushed.

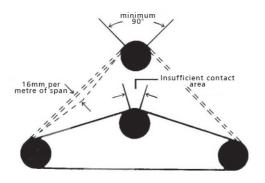

Ideal belt contact area should not be less than 90° of the pulley circumference.

Ensure that all moving parts are adequately guarded to prevent accidents.

### **OPERATION**

Pumps are dry self priming. If fluid does not enter pump after 30 seconds, stop pump, and check inlet hose for leaks and/or blockages.

Maximum speed for these pumps is 2200 rpm, do not operate pump outside the published limits without consulting the factory appointed distributor.

Do NOT allow liquid to freeze in the pump, drain pump by loosening end cover screws.

## SERVICE INSTRUCTIONS

Inspect all parts for wear or damage and replace as necessary.


#### **DIS-ASSEMBLY PUMP**


- 1. Remove end cover screws, end cover, and o-ring.
- 2. Remove spline seal and impeller using impeller removal tool.
- 3. Remove cam screw, cam, and wearplate.
- 4. Remove seal retaining ring.
- 5. Remove bearing dust seal (if fitted) and bearing retaining ring (if fitted)
- 6. Carefully push shaft from pump end to remove shaft/bearings assembly.
- 7. Remove seal from body.
- 8. Remove slinger o-ring and press off bearings.

#### **RE-ASSEMBLY PUMP**

- 1. Press bearing onto shaft and fit into body.
- 2. Replace bearing retaining ring (if fitted) and dust seal (if fitted).
- 3. Fit o-ring slinger.
- 4. Carefully install seal in pump body ensuring seal faces are clean and fit seal retaining ring.
- 5. Fit wearplate, cam, and cam screw ensuring cam screw o-ring seal is in place.
- 6. Fit impeller using a small amount of suitable grease.
- 7. Fit spline seal, o-ring, end cover, and end cover screws.


# PERFORMANCE (UK & US Versions)

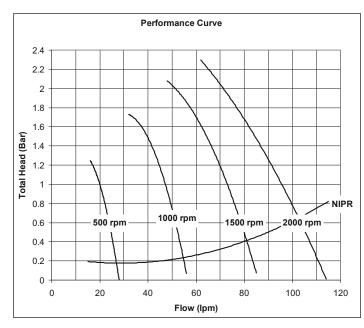


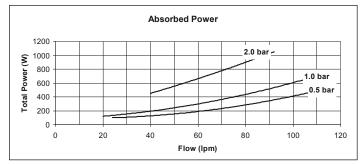

# PARTS LIST

KEY	DESCRIPTION	PART NUMBER	QTY
1	BEARING SHIELD	51586-0000	1
2	BEARING, BALL	SP2601-0468	2
3	BODY 080	51584-2000	1
4	CAM	53082-0000	1
5	ENDCOVER	50355-0000	1
6	HEX HEAD SCREW	X3001-176F	4
7	IMPELLER 080	920-0101	1
8	KEY 5x5x28	X4000-209A	1
9	MECH SEAL	96080-0620	1
10	0-RING	X4020-106A	1
11	0-RING	X4020-215A	1
12	0-RING	X4020-269A	1
13	RETAINING RING	SP1700-62	1
14	RETAINING RING	SP1701-438	1
15	ROLL PIN	SP3100-10	1
16	SCREW	X3003-176F	1
17	SHAFT 080	52587-0000	1
18	SPLINE SEAL	4345	1
19	SUPPORT WASHER	29706-0000	1
20	WEARPLATE	4156	1

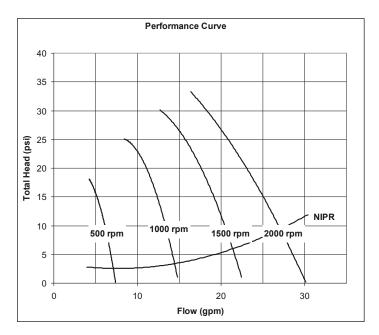

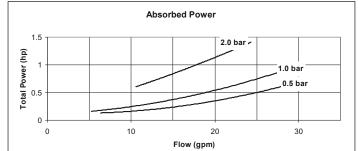

<u>016.002±0.006</u> (٤ð.0ø) 60 -HOLES Ø9(0.35) (Z0.E)8Z E 42(1.65) 14 0 .18) 30(1. 6 (13(19(15) m' 92 (4. 93 (1.34)125 4 9(0.75) (10) C uh U.I. ٢ 13 30 TORQUE 7.0±0.5NM 6 (5) 6 BS21 PORT (85.1)25 (97.2) 07 Rp1 BOTH (78.0)2.41 52(2.05) 1  $\bigcirc$ 20 (4.72) 8 Jabsco, 1 Kondelin Road, Cape Ann Industrial Park, Glocester, MA 01930 USA Tel : +1 978 281 0440 Fax : +1 978 283 2619 Jabsco, Bingley Road, Hoddesdon, Hertfordshire, EN11 OBU UK Tel : +44 (0) 1992 450 145 Fax: +44 (0) 1992 467 132 Fluid Products Canada, 55 Royal Road, Guelph, Ontario N1H 1T1 lem CANADA Fax: +1 519 821 5316 Tel : +1 519 821 1900

Let's Solve Water

Warranty: All products of the company are sold and all services of the company are offered subject to the company's warranty and terms and conditions of sale, copies of which will be furnished upon request. The information provided herein is for guidance only, it does not constitute a guarantee of the performance or specification of any individual product or component.

Tel: +39 039 685 2323

Tel : +81 (0) 45 475 8906

Tel : +49 (0) 40 53 53 73 0

Jabsco GmbH, Oststraße 28, 22844 Norderstedt

NHK Jabsco Co Ltd, 3-21-10, Shin - Yokohama, Kohoku-ku, Yokohama 222

Jabsco Italia, S.r.I., Via Tommaseo, 6, 20059 Vimercate, Milano

Fax : +81 (0) 45 475 8908

Fax : +49 (0) 40 53 53 73 11

Fax: +39 039 666 307

JAPAN

ITALY

GERMANY