

# Model 30573-0000

# ACCUMULATOR TANK

## FEATURES

- Internal Bladder
- Smoother and More Even Flow
- Quieter Water System
- Better Temperature Control
- Longer Pump Life
- Lower Battery Drain
- · Simply Fitted to New or Existing Systems
- Compact Size
- Snap-in Port Fittings include both:
  - 1/2" Barbed Hose Fittings and 1/2" Threaded Hose Fittings

# SPECIFICATIONS

Tank:

Hygienic, Light, Compact, Impact and Pressure Resistant Plastic Construction

Capacity:1 liter (33 fl oz)Max. OperatingPressure:Pressure:Up to 125 psi (8.6 bar)Pre-ChargePressure:10 psi (0.7 bar)Air Valve:Standard Tire ValveWeight:1.6 lb (0.7 kg)Dimensions:13-1/4" (337 mm) x 4-3/4" (119 mm)

#### IMPROVES MOST AUTOMATIC WATER PRESSURE SYSTEMS

This Accumulator Tank is intended for installation in any pumped water system controlled by a pressure switch. For example, PAR-MATE 2.5 or any Jabsco pressure pumps as found in boats, RV's, motor caravans, coaches and similar applications.


The Accumulator Tank smooths water flow and reduces on/off cycling of the pump by lessening the variation in pressure and flow between the pump and the outlets in the system.

The even flow of water gives better control of hot water temperature *especially noticeable with instantaneous gas water heaters* and with showers.

The reduced on/off cycling reduces noise from the pump motor, and from shock pressures (pipe hammer). It also reduces battery drain, and gives longer pump life.



# TYPICAL INSTALLATION

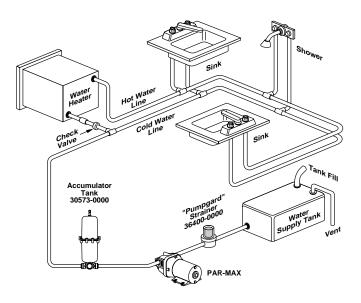

#### PRECHARGE PRESSURE ADJUSTMENT


The 30573-0000 tank is precharged at 10 psi (0.7 bar). If your pump cut-in pressure is significantly different, you may custom tune the tank to best fit your particular installation. To increase air pressure in tank, shut pump off, open a faucet to relieve system pressure and adjust precharge pressure using ordinary tire gauge and tire pump at valve in end of tank. Pressure should be checked from time to time. To check tank pressure: turn off power to water pump, open a faucet to relieve pressure. Check tank pressure, adjust if necessary. Close faucet and turn on power to pump. For best results, do not pressurize tank above 10 psi (0.7 bar).

#### SAFETY RELIEF VALVE RECOMMENDED

It is recommended that a relief valve with a setting of no more than 125 psi be installed. Often a relief valve is already installed at the water heater. Check its setting. This will protect the system in case the pressure switch fails.


# CLIP


#### HOW THE PRESSURE ACCUMULATOR WORKS

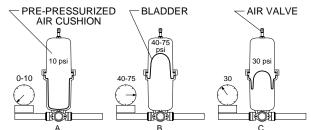

- A. Factory installed precharged air cushion.
- B. When pump starts, water enters the reservoir. At maxi mum pressure, system is filled. Pump shuts off.
- C. When water is demanded, pressure in the air chamber forces water into the system. Pump stays off until minimum pressure is reached. Then pump turns on.

**DANGER** Do not overpressure tank. Pressures over 125 psi (8.6 bar) may rupture tank and cause personal injury.

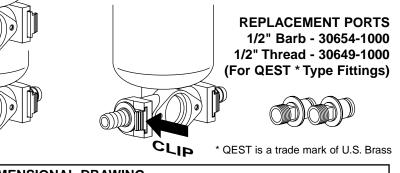

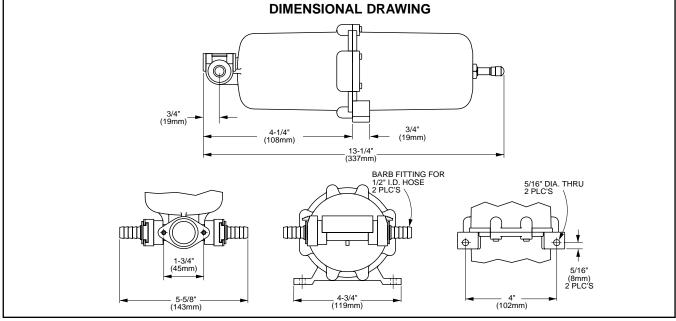

TÜV

CERT

ISO 9001 QUALITY SYSTEM

55 Royal Road

Tel: (519) 821-1900

Fax: (519) 821-2569

Fluid Products Canada

Guelph, Ontario N1H 1T1

CANADA

### Jabsco



U.S.A. Jabsco 1485 Dale Way, P.O. Box 2158 Costa Mesa, CA 92628-2158 Tel: (714) 545-8251 Fax: (714) 957-0609

© Copyright 1999, ITT Industries

UNITED KINGDOM Jabsco Bingley Road, Hoddesdon Hertfordshire EN11 OBU Tel: +44 (0) 1992 450145 Fax: +44 (0) 1992 467132

Printed in U.S.A.

All Rights Reserved

Fax: 045-475-8908

Form: 43000-0584

NHK Jabsco Company Ltd.

Kohoku-Ku, Yokohama, 222

3-21-10, Shin-Yokohama

Tel: 045-4758906

JAPAN

THE PRODUCTS DESCRIBED HEREIN

ITED WARRANTY, WHICH IS AVAILABLE

FOR YOUR INSPECTION UPON REQUEST.

ARE SUBJECT TO THE JABSCO ONE YEAR LIM-

GERMANY Jabsco GmbH Oststrasse 28 22844 Norderstedt Tel: +49-40-53 53 73 -0 Fax: +49-40-53 53 73 -11

Rev. 08/1999