Galley Maid ® Toilet Pump

Brushes 40999 5000018

Supply Side (smaller)

SL = Supply

1/4" NPT Plug

1/4 - 20 X 3/4" SS

1/4" SS

SL7 Stator

SL7 Rotor

Seal Set

1/4 - 20 X 1" SS

1/4" SS

Sewage Side (larger)

ME = macerator

3/8" NPT Plug

10 - 32 X 3/4" SS

#10 SS

MR10 Rotor

MR10 Stator

Seal Set

1/4 - 20 X 1" SS

1/4" SS

one value to pump out (large)
one used to fill on board (small)
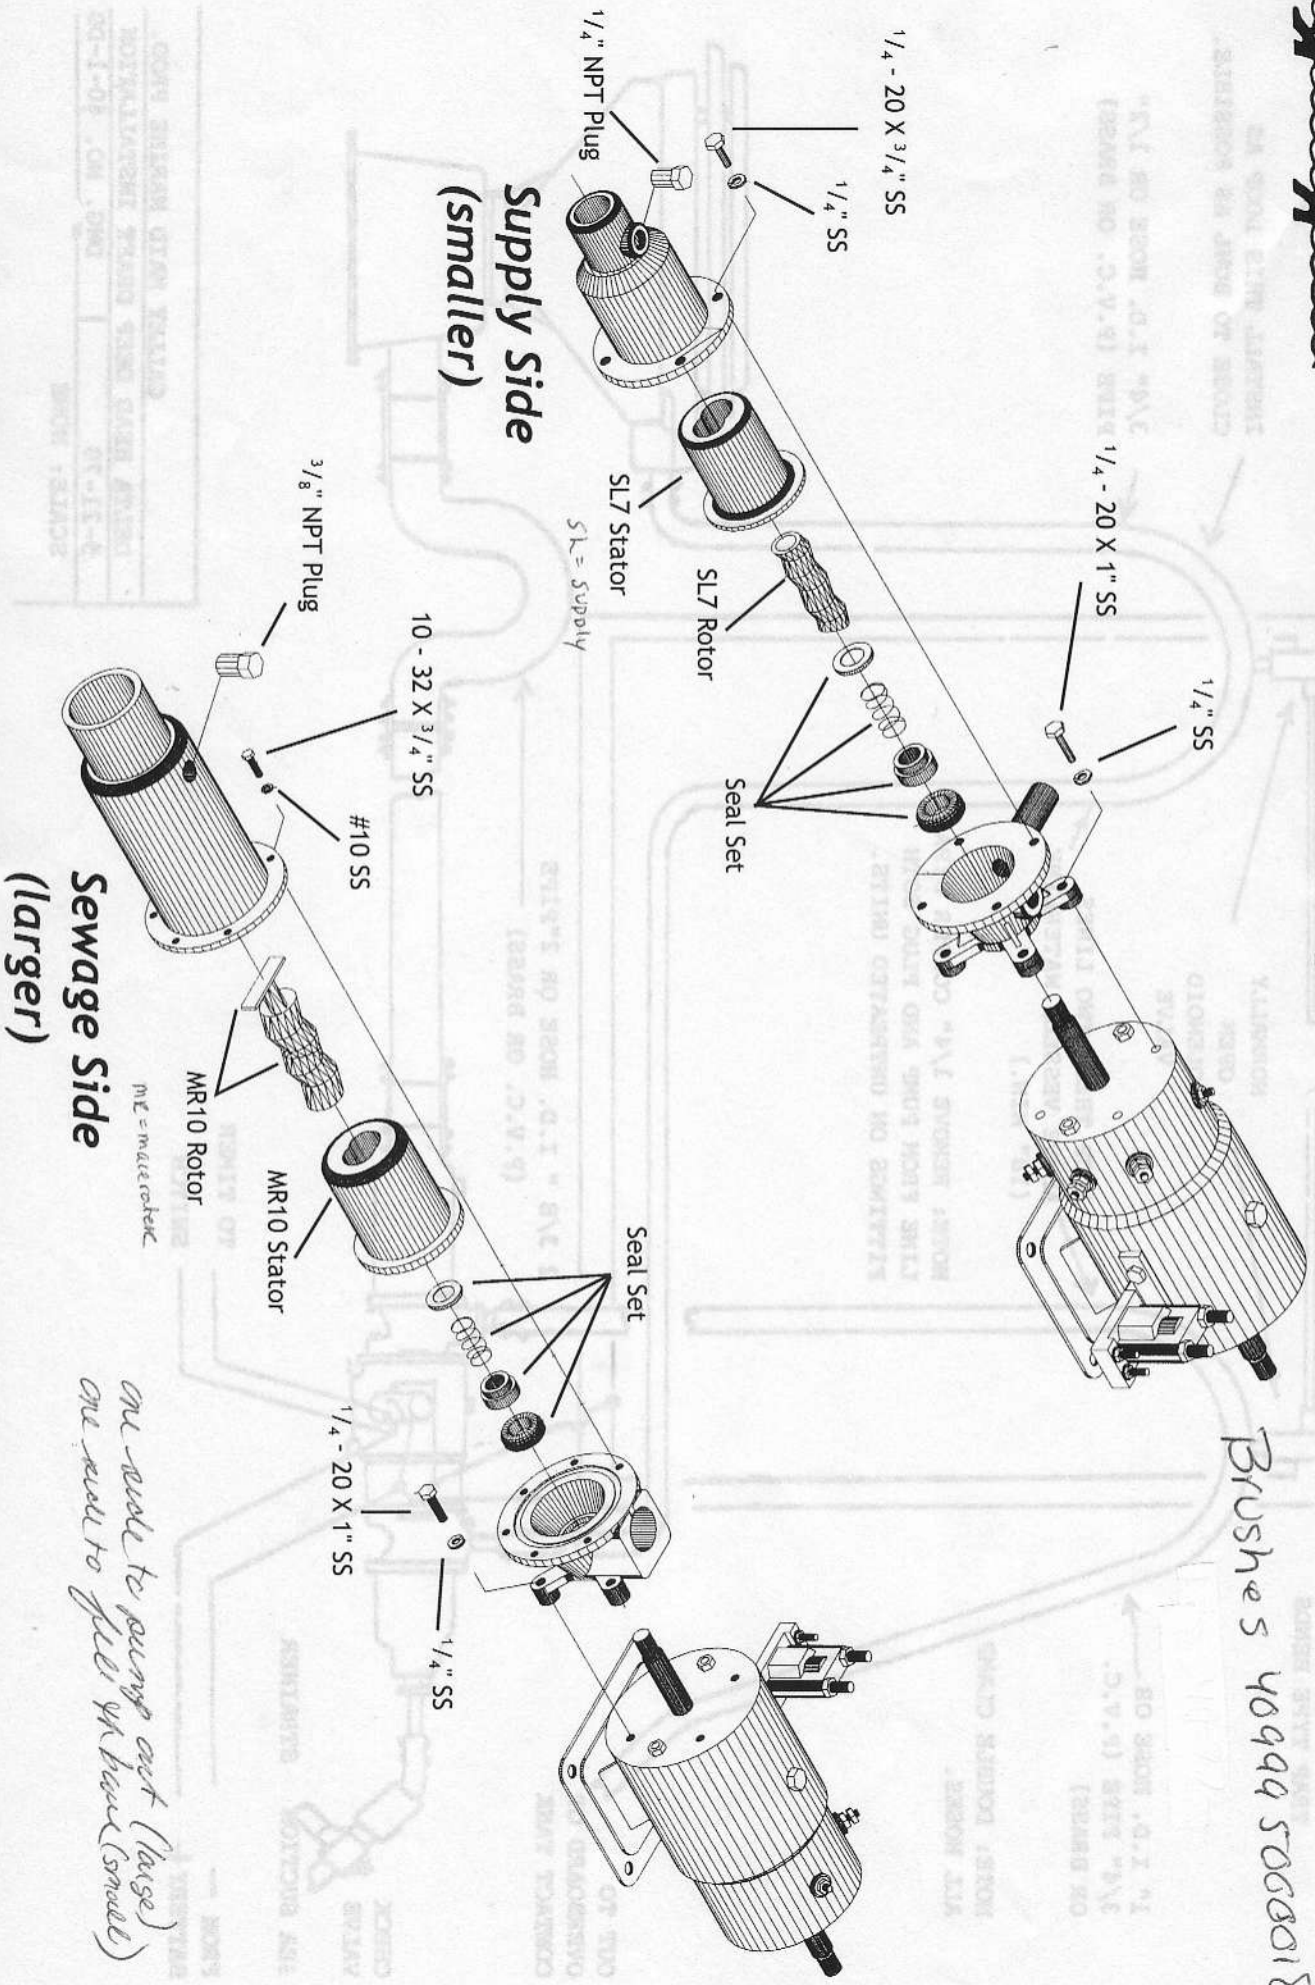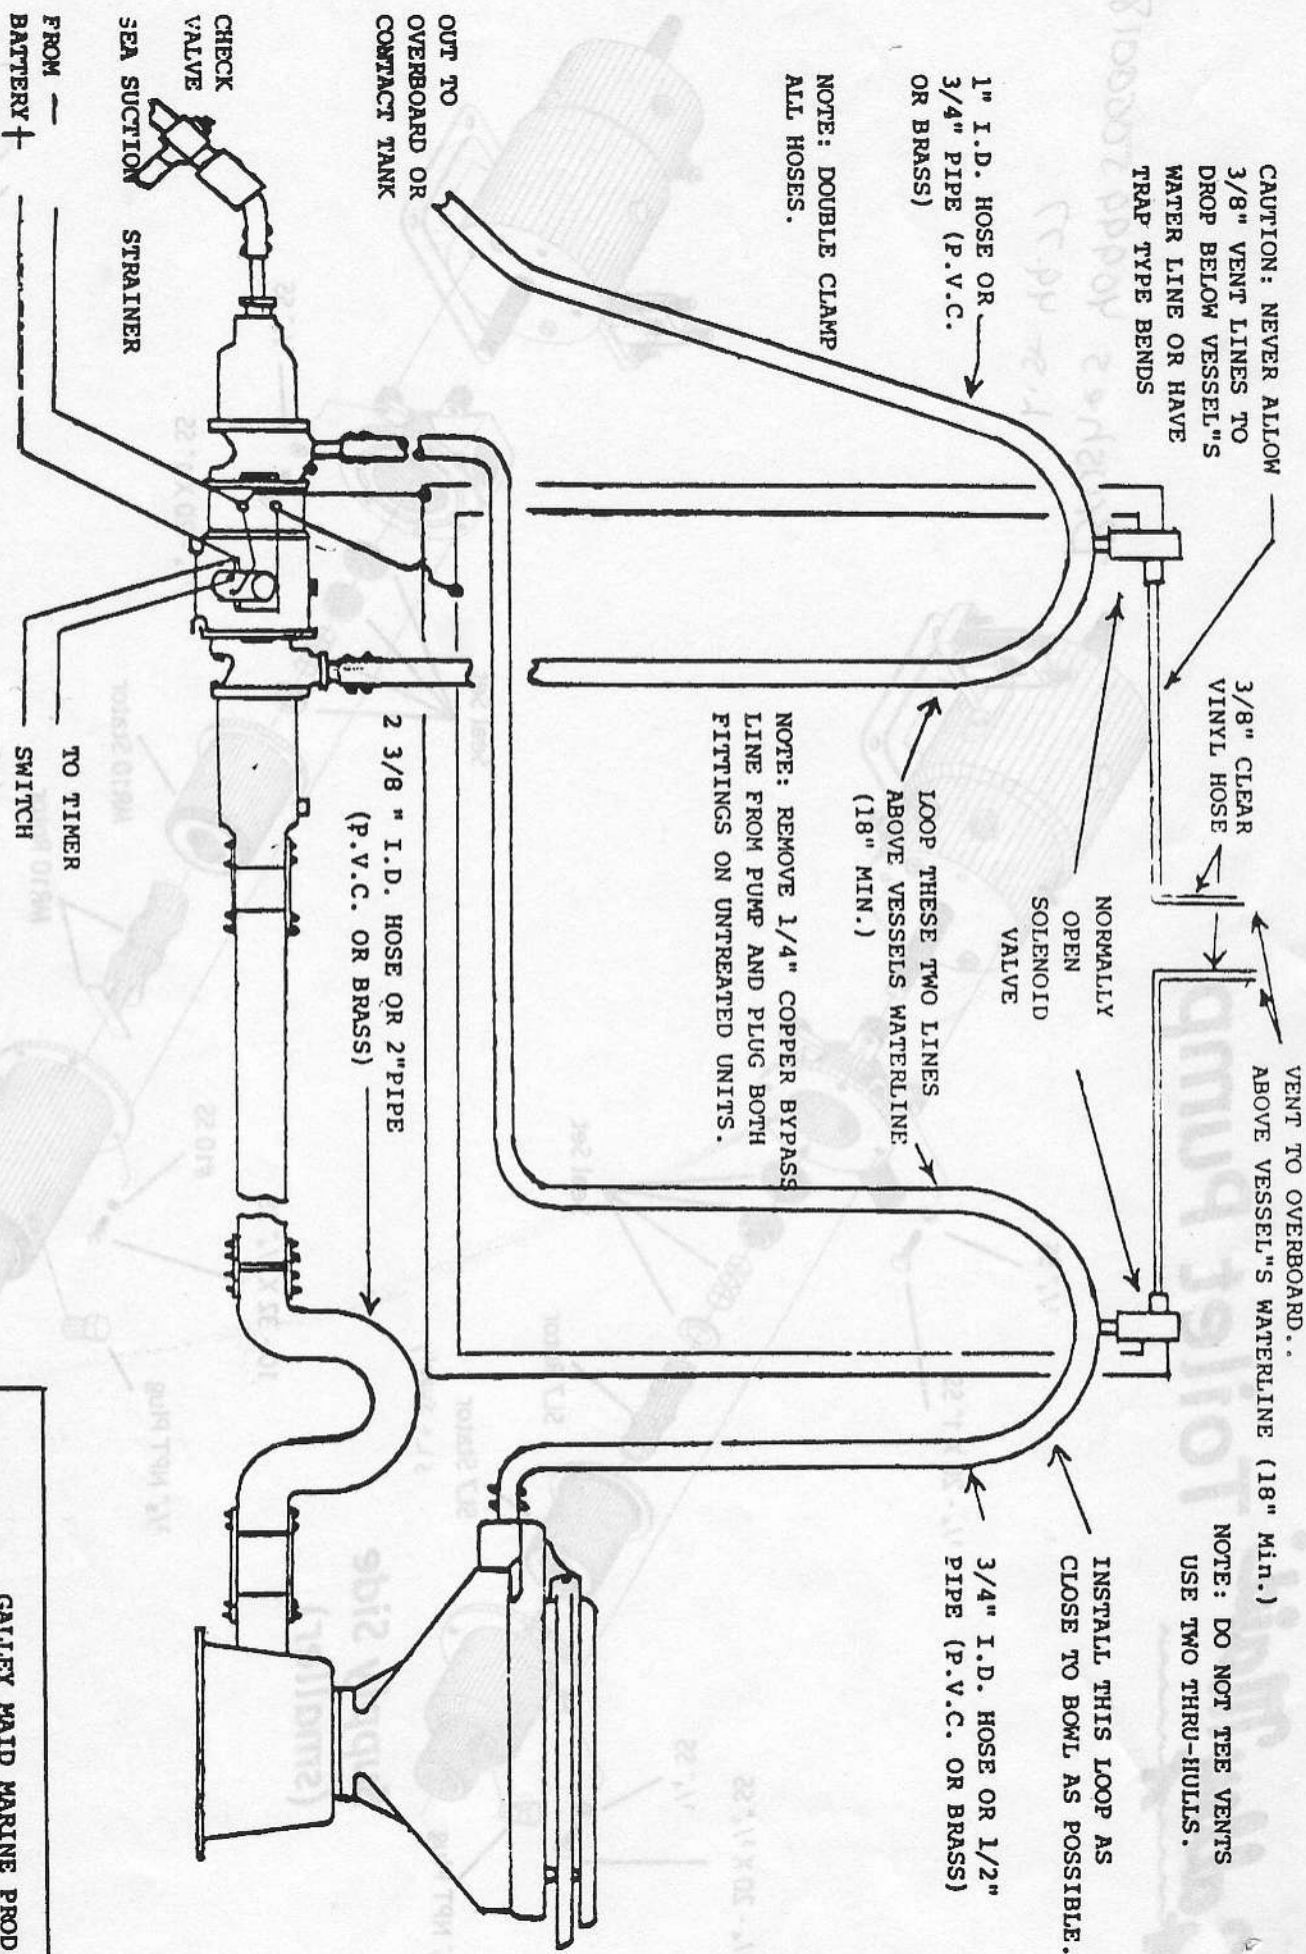
CAUTION: NEVER ALLOW
3/8" VENT LINES TO
DROP BELOW VESSEL"S
WATER LINE OR HAVE
TRAP TYPE BENDS

1" I.D. HOSE OR
3/4" PIPE (P.V.C.
OR BRASS)

NOTE: DOUBLE CLAMP
ALL HOSES.

OUT TO
OVERBOARD OR
CONTACT TANK

CHECK
VALVE

SEA SUCTION STRAINER

FROM —
BATTERY +

SWITCH

TO TIMER

2 3/8 " I.D. HOSE OR 2"PIPE
(P.V.C. OR BRASS)

3/8" CLEAR
VINYL HOSE

NOTE: REMOVE 1/4" COPPER BYPASS
LINE FROM PUMP AND PLUG BOTH
FITTINGS ON UNTREATED UNITS.

LOOP THESE TWO LINES
ABOVE VESSELS WATERLINE
(18" MIN.)

3/8" CLEAR
VINYL HOSE

VENT TO OVERBOARD..
ABOVE VESSEL"S WATERLINE (18" Min.)

NOTE: DO NOT TEE VENTS
USE TWO THRU-HULLS.

NORMALLY
OPEN
SOLENOID
VALVE

INSTALL THIS LOOP AS
CLOSE TO BOWL AS POSSIBLE.

3/4" I.D. HOSE OR 1/2"
PIPE (P.V.C. OR BRASS)

GALLEY MAID MARINE PROD.
DELTA HEAD DEEP DRAFT INSTALLATION
5-21-79   DWG. NO. 40-1-DD
SCALE: NONE