



REVERSIBLE ROTARY VANE PUMP 12V DC

FEATURES

Body: Bronze

Rotor: Plastic – Liquid Crystal Polymer Vanes: Plastic – Polyphenylene Sulfide

Seal: Lip Type, Nitrile

Motor: 12V DC Permanent magnet Type,

Intermittent Duty, Fully Enclosed,

Stainless Steel Shaft

Ports: 1/2" NPT Internal Pipe Threads

1" (25mm) External Hose Barb

Height: 3-3/8" (86mm)
Length: 8-5/8" (219mm)
Width: 4-3/4" (121mm)
Weight: 5-1/2 lbs (2.5 kg)



Explosion hazard. Do not operate with rivets removed from motor case. Explosion resulting in personal injury, death or property damage can occur. Case openings must be sealed to avoid explosion and maintain ignition protected rating.

APPLICATIONS

The Jabsco Reversible Rotary Vane Pump is ideal for transferring diesel fuel. It is self-priming to about three feet and can pump against a discharge head up to twenty feet. With its integral on-off reversing switch, it is ideal for moving fuel between port and starboard fuel tanks.



Explosion hazard. Do not pump volatile liquids with a flash point below 100°F (38°C). Doing so can cause an explosion or fire resulting in injury or death.

NOTE: No. 2 diesel fuel has a flash point of 125°F (52°C) [ASTM 0-93].

INSTALLATION

The pump must be mounted in a dry location – the motor is not waterproof and must not be submerged. SELECTION OF A COOL, VENTILATED location will generally extend pump motor life. The unit can be mounted in any desired position. It is best to mount so that fluid dripping from a loose port connection will not wet the motor. The pump head may be rotated 180° to reverse the direction of flow if desired.



Model 18680-1000

Motor with switch assembly meets USCG Electrical Standards (Title 33, Chapter I, Part 183; Subpart I), and ISO 8846 Marine for IGNITION PROTECTION on gasoline powered vessels. SEE WARNING NOTE.

PLUMBING CONNECTIONS

Pump ports have external 1" hose barb and internal 1/2" pipe threads. Use hose that does not kink when bent and with sufficient wall thickness to prevent collapse when used on suction side of pump. Ideally, hoses should be routed so that some fluid will be retained in pump body to wet the rotor and vanes. Wetting the rotor and vanes aids priming. Use a strainer on the intake hose if debris or solids are present in the fluid being pumped. ALL HOSES MUST HAVE AIRTIGHT CONNECTIONS TO ENABLE FAST PRIMING.

HEAD CAPACITY TABLE

	Total Head		Capacity	
PSI	Feet	Metres	GPM	LPM
2.1	5	1.5	5.2	19.7
4.3	10	3.0	5.0	18.9
6.5	15	4.6	4.7	17.8
8.7	20	6.1	4.3	16.3

Table shows approximate Head-Flow for new pump.


ELECTRICAL SPECIFICATION



Explosion hazard. If pump is operated in an area containing flammable vapors, wire leads must be joined by insulated mechanical locking connectors. Loose or inadequate wire connections can spark resulting in an explosion. Property damage, injury or death can occur.

The Reversible Vane pump should be wired to an overcurrent protected distribution panel fitted with a 20 amp breaker or fuse that is specific to the Reversible Vane Pump circuit. Connect the orange motor lead to positive and the black motor lead to negative.

Model	Voltage DC	AMP Draw	Fuse Size	
18680-1000	12	8	15 Amp	

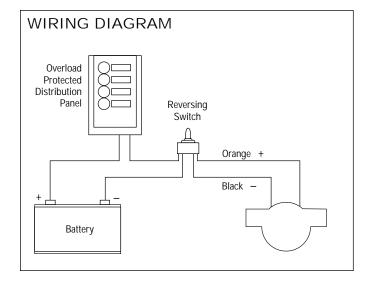

MINIMUM WIRE SIZES

Wire Length Between Battery and Motor	12V
1-10 ft (3m)	#14
11-20 ft (6m)	#12
21-30 ft (9m)	#12

NOTE: To prevent motor damage, use only multi-strand copper wire in size recommended. DO NOT use ordinary lamp cord or other substitutes.


OPERATION

THE REVERSIBLE VANE PUMP IS DESIGNED FOR INTERMITTENT DUTY. DO NOT OPERATE PUMP FOR MORE THAN 30 MINUTES CONTINUOUSLY.

Rotary Vane pumps must NOT be run dry, as the pumped liquid is the lubricant for the rotor and vanes. Observe the outlet and shut off pump as soon as liquid stops flowing.

The pump cannot run against a closed outlet. Pressure for normal operation should not exceed 20 feet of head (8.7 psi). Excessive pressures will cause fuse to blow.

Temperature of pumped liquid may be in the range of 45°-165°F (10°-78°C).

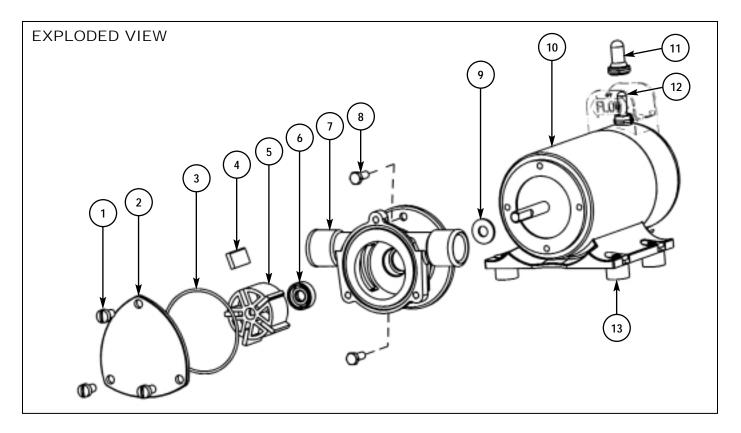

PARTS LIST

			Part
Key	Description	Qty.	Number
1	Screw End Cover (3/kit)		91004-0090
2	` ,		18647-0000
3	*O-ring		18753-0660
4	*Vanes (set of 5)		18753-0072
5	· ·		18753-0073
6	*Seal	1	18753-0384
7	Body		18644-0000
8	Screw (pump to motor) (3/kit)	1	18753-0652
9	Slinger	1	6342-0000
10	0 Motor 45710-0000 12V DC		18753-0075
11	Protective Boot		98022-0000
12	Switch, Reversing		18753-0652
13	†Grommet	1	92900-0120
	Service Kit	4	90201-0000

^{*}Parts contained in Service Kit.

DISASSEMBLY

- 1. Remove end cover screws, end cover and O-ring.
- 2. Withdraw rotor and vanes.
- 3. Loosen and remove the two slotted hex screws, which attach body to motor.
- Tap body lightly between ports and remove body from motor.
- 5. With a 1/2" diameter dowel, push against the shaft seal from back (motor) side of the body to dislodge seal from the seal bore.

NOTE: Do not tamper with or disassemble motor.

MAINTENANCE


Check wires and connections to be sure corrosion is not adding additional resistance to the motor circuit and causing a low voltage condition at the motor. Low voltage can inhibit motor from starting and cause fuse to blow. Full voltage should be available to prevent motor damage.

If pump is to be in freezing temperatures, drain by loosening end cover screws.

ASSEMBLY

- Lubricate seal with water and position it in seal bore with lip, or hollowed-out side of seal, pointing towards the rotor/vane bore. With a 1/2" diameter dowel, push against the shaft seal into its bore until it contacts the bottom.
- 2. Lubricate motor shaft and install body on motor.
- 3. Aligning flat in rotor with flat on motor shaft, install rotor. Install vanes in vane slots of rotor.
- 4. Install O-ring, end cover and end cover screws.

[†]Parts supplied with Motor.

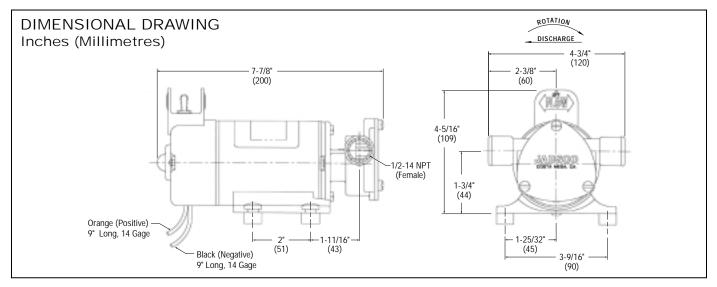

ONE YEAR LIMITED WARRANTY

A. LIMITED WARRANTY:

Jabsco warrants that at the time of shipment, the products manufactured by Jabsco and sold hereunder shall be in conformity with applicable written specifications and descriptions referred to or set forth herein, free from defects in material and workmanship, merchantable, and suitable for a particular purpose, provided such is implied by State law under the circumstances of this sale.

B. WARRANTY ADJUSTMENT:

- Jabsco agrees to repair or furnish a replacement for, but not to remove or install, any product or component thereof which, within one (1) year from date of purchase, shall upon test and examination by Jabsco prove defective within the above warranty. Receipt verifying purchase date is required to obtain adjustment.
- Buyer shall notify Jabsco of any defect within this warranty no later than ninety (90) days after the defect is discovered.
- 3. No product will be accepted for return or replacement without the prior written authorization of Jabsco. Upon such authorization, and in accordance with instructions from Jabsco, the product will be returned to Jabsco, shipping charges prepaid by Buyer. Products returned to Jabsco will be addressed as follows:

JABSCO 1485 Dale Way Costa Mesa, California 92626-3998

Or to such alternate locations as may be designated on the product, its container, or this sheet.

Repair or replacement made under this warranty will be shipped prepaid to Buyer.

C. EXCLUSIONS FROM WARRANTY AND LIMITATION OF LIABILITY:

 The foregoing warranty is limited solely as set forth herein and applies only for the period designated above.

Jabsco

U.S.A.



Jabsco 20 Icon Foothill Ranch, CA 92610-3000

Footniii Ranch, CA 92610-. Tel: 949.609.5106 Fax: 949.859.1254 UNITED KINGDOM Jabsco Bingley Road, Hoddesdon

Hertfordsire EN11 OBU Tel: +44 (0) 1992 450145 Fax: +44 (0) 1992 467132 CANADA Fluid Products Canada 55 Royal Road Guelph, Ontario N1H 1T1 Tel: (519) 821.1900 Fax: (519) 821.2569

JAPAN NHK Jabsco Company Ltd. 3-21-10, Shin-Yokohama Kohoku-Ku, Yokohama, 222 Tel: 045.475.8906 Fax: 045.475.8908 GERMANY Jabsco GmbH Oststrasse 28 22840 Norderstedt Tel: +49-40-53 43 73 -0 Fax: +49-40-53 53 73 -11

ITT SHALL NOT BE LIABLE FOR ANY LOSS, DAMAGE, SPECIAL OR CONSEQUENTIAL DAMAGE OF ANY KIND, WHETHER BASED UPON WARRANTY, CONTRACT, NEGLIGENCE, OR STRICT LIABILITY ARISING IN CONNECTION WITH THE SALE, USE, OR REPAIR OF THE PRODUCT.

- THE MAXIMUM LIABILITY OF ITT IN CONNECTION WITH THIS WARRANTY SHALL NOT IN ANY CASE EXCEED THE CONTRACT PRICE FOR THE PRODUCT CLAIMED TO BE DEFECTIVE OR UNSUITABLE.
- This warranty does not extend to any product manufactured by Jabsco which has been subjected to misuse, neglect, accident, improper installation, or use in violation of instructions furnished by Jabsco.
- 5. This warranty does not extend to or apply to any unit which has been repaired or altered at any place other than Jabsco's factory, or by persons not expressly approved by Jabsco, nor to any unit the serial number, model number, or identification of which has been removed, defaced or changed.
- Components manufactured by any supplier other than Jabsco shall bear only that warranty made by the manufacturer of that product.
- This warranty applies to products defined as "consumer products" by the Consumer Product Warranties Act as from time to time amended.

D. CONSUMER RIGHTS:

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. Some states do not allow exclusion or limitation of damages.

STANDARD WARRANTY: If the products manufactured and sold hereunder are not Consumer Products, the warranty extended to Buyer shall be as set forth in subparagraphs (A), (B), and (C), EXCEPT THAT ALL EXPRESS OR IMPLIED WARRANTIES OR MERCHANTABILITY OR SUITABILITY FOR ANY PARTICULAR PURPOSE ARE EXCLUDED.

© Copyright 2001, ITT Industries Printed in U.S.A. All Rights Reserved Form: 43000-0758 Rev. 8/2001