



# Galley Maid<sup>®</sup> Toilet Pump

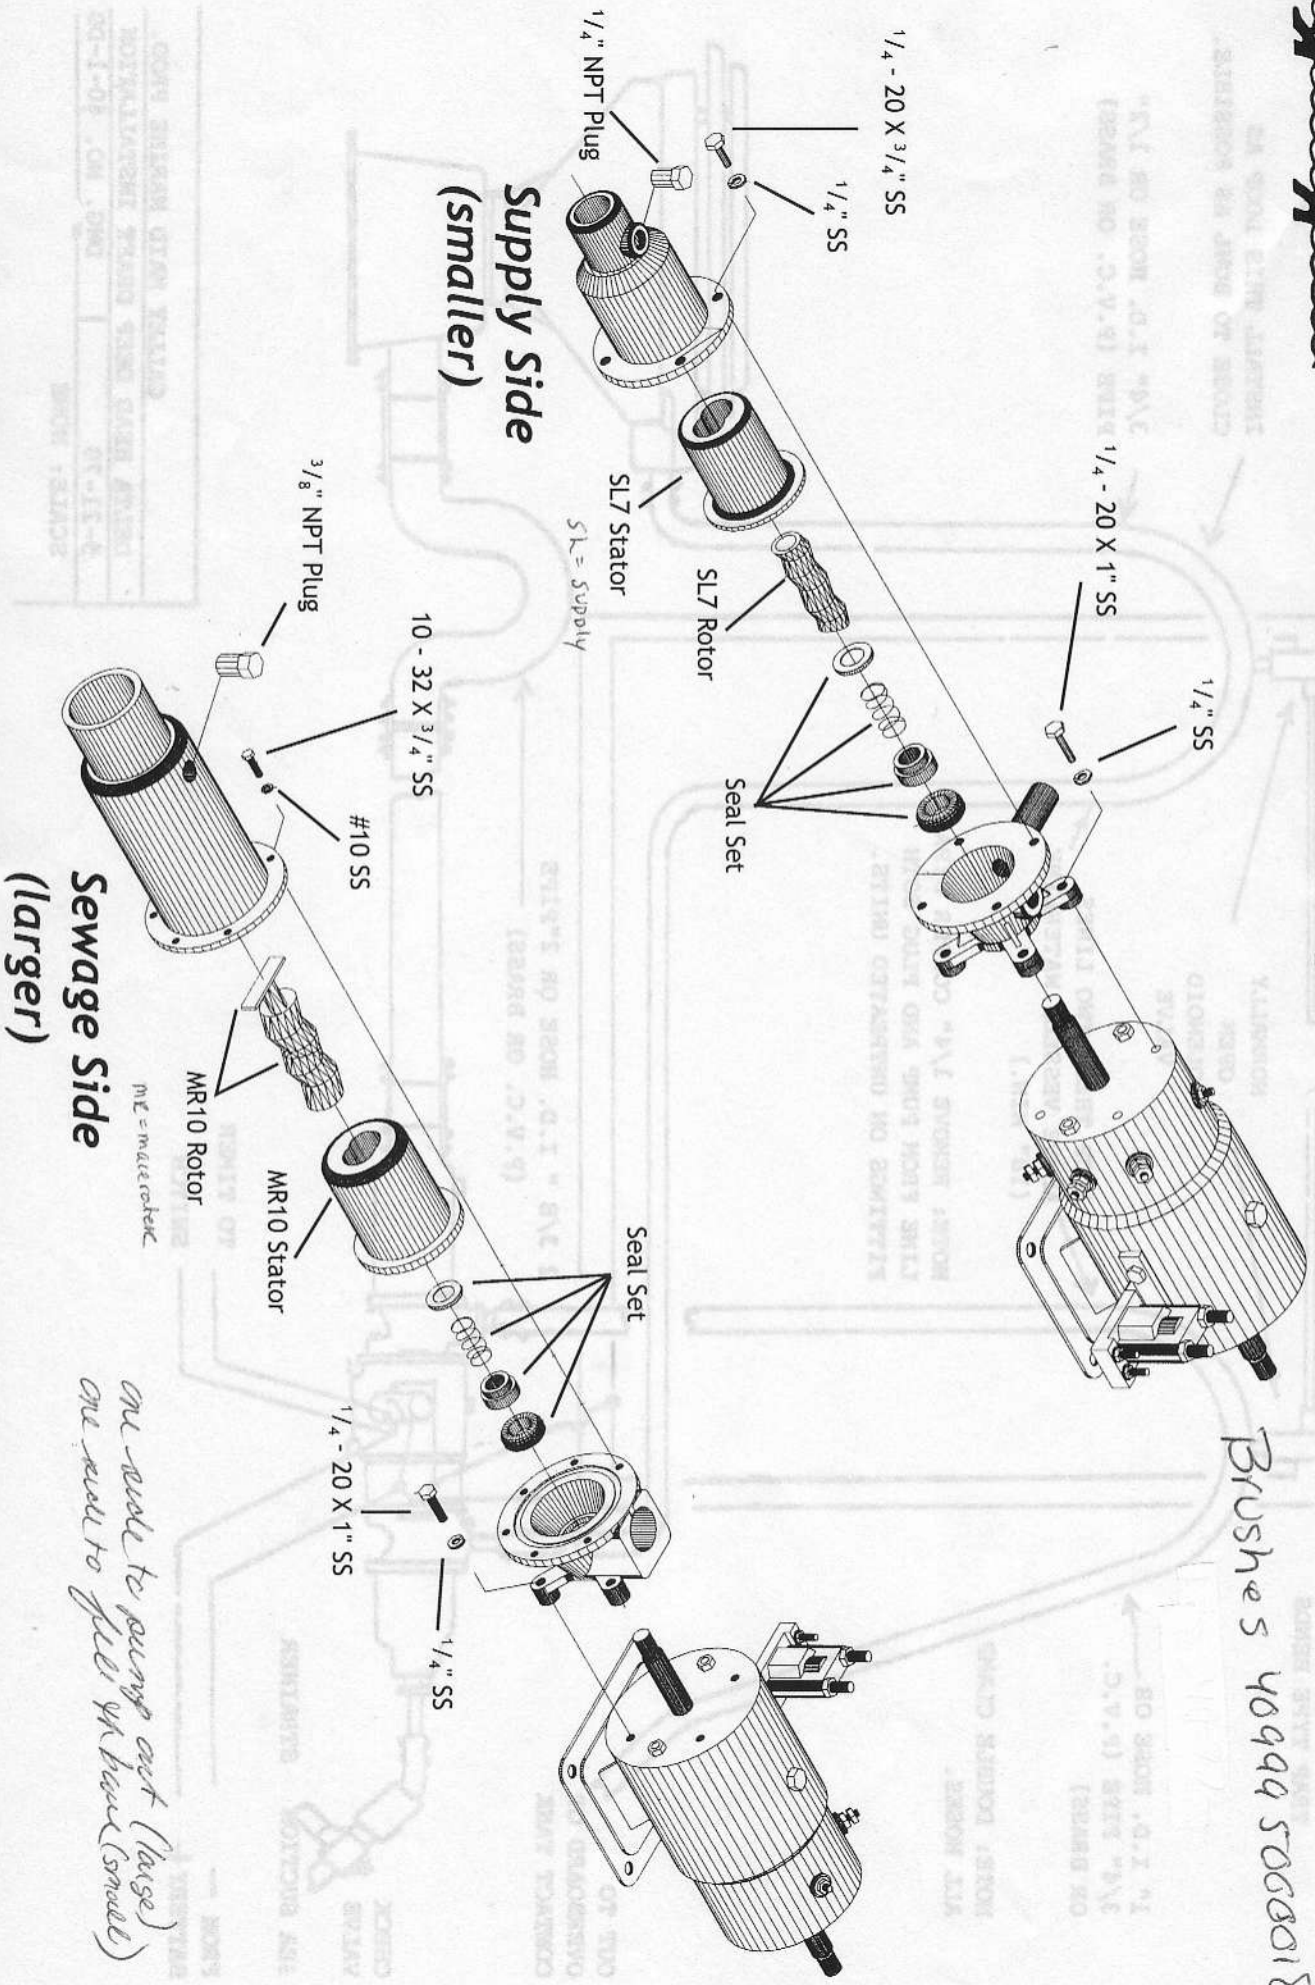

*one side to pump out (large)  
one side to fill w/ water (small)*

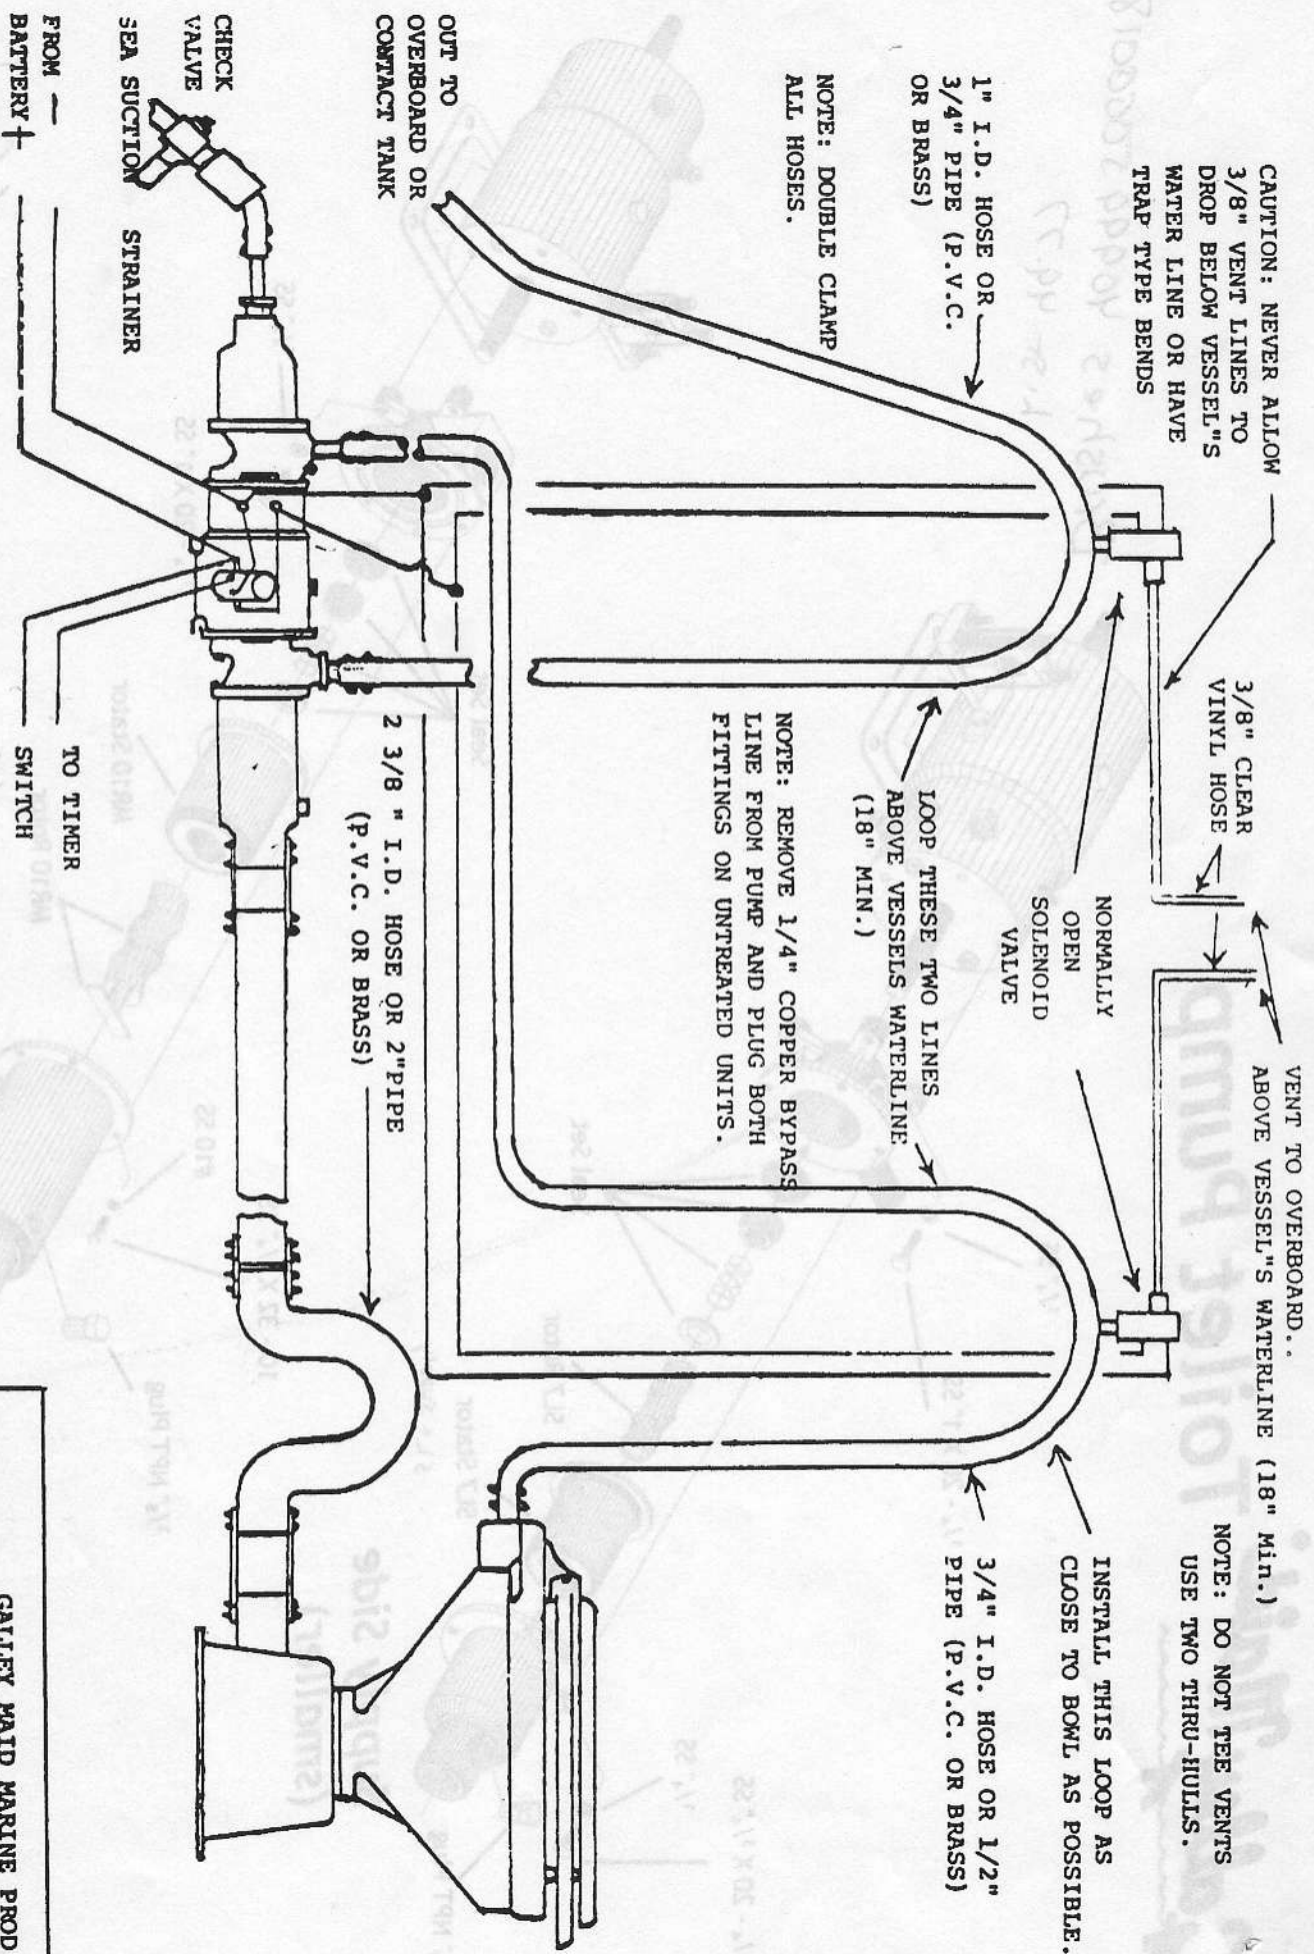

CAUTION: NEVER ALLOW  
3/8" VENT LINES TO  
DROP BELOW VESSEL'S  
WATER LINE OR HAVE  
TRAP TYPE BENDS

1" I.D. HOSE OR  
3/4" PIPE (P.V.C.  
OR BRASS)  
NOTE: DOUBLE CLAMP  
ALL HOSES.

3/8" CLEAR  
VINYL HOSE

NOTE: REMOVE 1/4" COPPER BYPASS  
LINE FROM PUMP AND PLUG BOTH  
FITTINGS ON UNTREATED UNITS.

LOOP THESE TWO LINES  
ABOVE VESSELS WATERLINE  
(18" MIN.)

NORMALLY  
OPEN  
SOLENOID  
VALVE

VENT TO OVERBOARD...  
ABOVE VESSEL'S WATERLINE (18" Min.)

NOTE: DO NOT TEE VENTS  
USE TWO THRU-HULLS.

INSTALL THIS LOOP AS  
CLOSE TO BOWL AS POSSIBLE.

3/4" I.D. HOSE OR 1/2"  
PIPE (P.V.C. OR BRASS)

OUT TO  
OVERBOARD OR  
CONTACT TANK

2 3/8" I.D. HOSE OR 2" PIPE  
(P.V.C. OR BRASS)

CHECK  
VALVE  
SEA SUCTION  
STRAINER  
FROM  
BATTERY +

TO TIMER  
SWITCH

GALLEY MAID MARINE PROD.	
DELTA HEAD DEEP DRAFT INSTALLATION	
5-21-79	DWG. NO. 40-1-DD
SCALE: NONE	