

SELF-PRIMING PUMPS

FEATURES

- Body:** Bronze
- Impeller:** Neoprene or Nitrile (Oil Resistant)
- Shaft:** Stainless Steel
- Shaft Seal:** Lip Seal, Buna N
- Bearings:** Sealed Ball Bearings:
- Ports:** 1/2" NPT
- Weight:** 4-1/4 lbs (2 kg) approx.

Model 1673-SERIES

VARIATIONS AVAILABLE

| MODEL | VARIATIONS |
|-----------|---|
| 1673-1001 | Neoprene Impeller |
| 1673-1003 | Nitrile Impeller (Oil Resistant) |
| 1673-1051 | Half Thickness Cam, (Where reduced capacity is required with a fixed speed) |

APPLICATIONS & OPERATING INSTRUCTIONS

MARINE: Engine cooling, Pumping bilges, Washdowns, Circulating water in bait tanks, Utility dock side pump.

INDUSTRIAL: Circulating and transferring, Velocity-mixing, Pumping machine tool coolants, Return spill, Sump drainage, Chemicals, Pharmaceuticals, Soap, Liquors, Ink, Dyes, Alcohol, Various acids, Tanning liquors, Glycerine, Brine, etc.

FARMING: Pumping water for stock, Pumping water from shallow wells and cisterns, Pumping liquid ballast into tractor tires.

PLUMBING AND HOME EMERGENCY USE: Pumping out flooded basements, Cesspools, Sumps, Water heaters and water closets, Drains and sinks, Draining fishponds and pools.

1. **INSTALLATION** – Pump may be mounted in any position. Intake and discharge ports are determined by the direction of shaft rotation (refer to Dimensional Drawing). Before installing, turn the pump shaft in the direction of the operating rotation.

2. **DRIVE** – Belt or Direct with flexible coupling.

NOTICE: Do not press pulley or coupling on the shaft without supporting the shaft to prevent its movement into the impeller bore.

Belt Drive – Overtight belt load will reduce pump bearing life.

Direct Drive – Clearance should be left between drive shaft and pump shaft when installing coupling. Always mount and align pump and drive shaft before tightening the coupling set screw.

WARNING: EXPOSED PULLEYS AND BELTS CAN CAUSE INJURY. INSTALL SHIELD AROUND PULLEYS AND BELTS.

3. **SPEEDS** – 100 RPM to the maximum shown in the performance table. Consult the factory for operation at speeds above those shown. For longer pump life, operate at lowest possible speeds.

4. **SELF-PRIMING** – Primes at low or high speeds. For vertical lift of 10 feet (3.0 m), a minimum of 800 RPM is required. Pump will produce suction lift of up to 22 feet (6.7m) when wetted. BE SURE SUCTION LINES ARE AIRTIGHT OR PUMP WILL NOT SELF-PRIME.

5. **RUNNING DRY** – Unit depends on liquid pumped for lubrication. DO NOT RUN DRY for more than 30 seconds. Lack of liquid will damage the impeller.

6. **NOTICE** – Do not pump light fraction petroleum derivatives, solvents, thinners, highly concentrated or organic acids. Damage to pump may result. Consult Jabsco Chemical Resistance Table (available upon request from ITT Jabsco) for proper body materials and impeller compounds. If corrosive fluids are handled, pump life will be prolonged if pump is flushed with water after each use or after each work day.


OPERATING INSTRUCTIONS (Cont.)

7. **PRESSURES** – Consult Head Capacity Table for recommended maximum for continuous operation. If pressures exceed those shown, consult the factory.
8. **TEMPERATURES** – Neoprene 45°-180°F (7°-82°C), Nitrile 50°-180°F (10°-82°C).
9. **FREEZING WEATHER** – Drain unit by loosening end cover. The following anti-freeze compounds can be used without any adverse effects to the neoprene impeller: Atlas

“Permaguard”, DuPont “Zerex” and “Telar”, Dow Chemical “Dowguard” and Olin Mathison “Pyro Permanent”. Most methyl alcohol (methanol) based anti-freeze can be used with neoprene. **(DO NOT USE PETROLEUM BASED ANTI-FREEZE COMPOUNDS OR RUST INHIBITORS.)**

10. **SPARE PARTS** – To avoid costly shut downs, keep a JABSCO Service Kit on hand.

EXPLODED VIEW

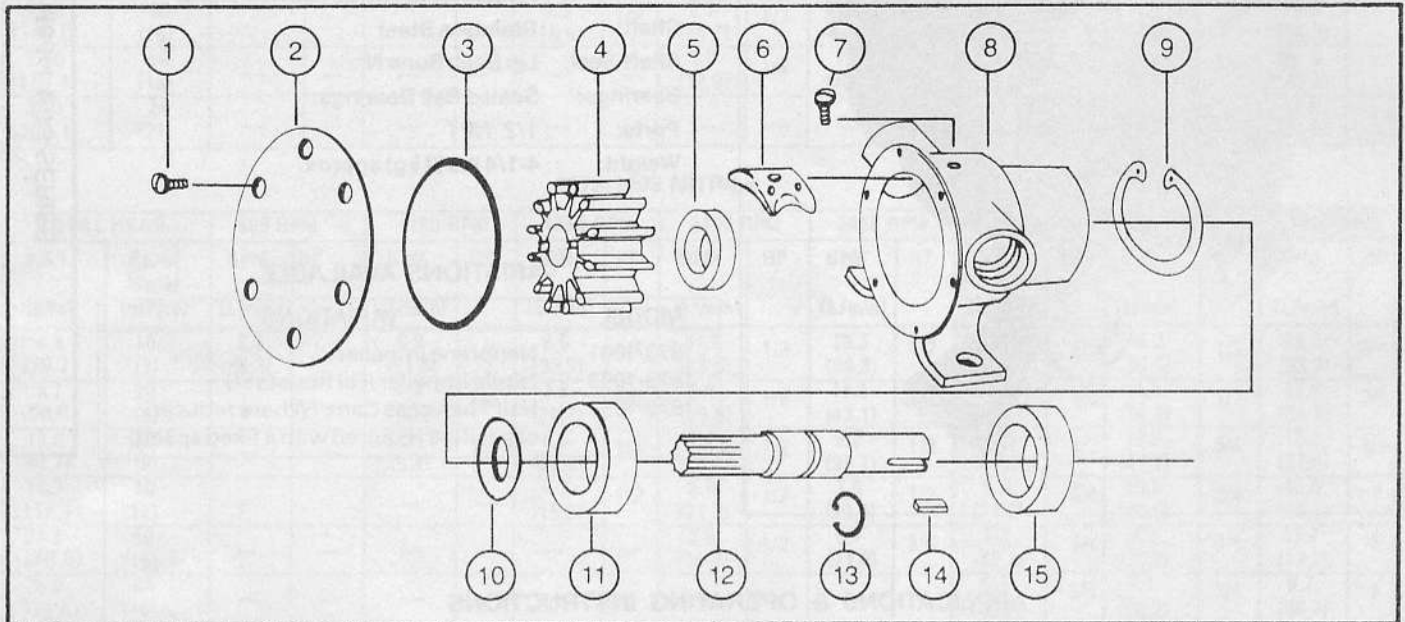

PARTS LIST

| KEY | DESCRIPTION | PART NO. | QTY. |
|-----|---|--------------------------|------|
| 1 | SCREW KIT (CAM & END COVER SCREWS)† | 18753-0134 | 1 |
| 2 | END COVER | 11836-0000 | 1 |
| 3 | *O-RING | 18753-0133 | 1 |
| 4 | *IMPELLER NEOPRENE NITRILE | 1210-0001 1210-0003 | 1 |
| 5 | *SEAL | 92700-0060 | 1 |
| 6 | CAM FULL THICKNESS HALF THICKNESS | 490-0001 2434-0000 | 1 |
| 7 | SCREW, CAM | SEE KEY 1 | |
| 8 | BODY | 18753-0128 | 1 |
| 9 | RETAINING RING | 18753-0131 | 1 |
| 10 | SLINGER | 3286-0000 | 1 |
| 11 | BEARING | 18753-0130 | 2 |
| 12 | SHAFT | 18753-0129 | 1 |
| 13 | RETAINING RING | 18753-0132 | 1 |
| 14 | KEY | 9215-0010 | 1 |
| | SERVICE KIT NEOPRENE NITRILE | 90015-0001 90015-0003 | |

* Parts supplied in Service Kit. Also included is an end cover gasket for older model pumps. Do not use gasket with O-ring end cover seal.

† Screw Kit contains 7 each #10-32 x 3/8" pan. hd. mach. screws and 1 each #10-32 x 5/16" pan. hd. mach. screw. The 5/16" screw is used only with a half thickness cam.

SERVICE INSTRUCTIONS

DISASSEMBLY


- 1 Remove end cover screws, end cover and O-ring
- 2 Remove impeller by grasping hub with water pump pliers.
- 3 Loosen cam screw and remove cam (clean off sealant)
- 4 Remove pulley or coupling and key from shaft.
- 5 Remove retaining ring which secures bearing shaft assembly to pump body.
- 6 From impeller end of pump, press bearing and shaft assembly out of bearing bore. Remove slinger from shaft.
- 7 From drive end of pump, press the seal out of the seal bore.
- 8 If bearings or shaft need to be replaced, carefully insert two equal size slot screwdrivers between bearings 180° apart. Simultaneously twist screwdrivers in opposite directions to separate bearings. Continue to push bearings off of shaft taking care not to damage bearings or scratch shaft.
- 9 Remove snap ring that positions the bearings on the shaft.

NOTE Inspect all parts for wear or damage and replace where necessary.

ASSEMBLY

1. Install bearing positioning snap ring on shaft.
2. Press bearings (one from each end of shaft) onto shaft and against positioning snap ring. Slide slinger onto impeller end of the shaft and position against raised shoulder near bearings.
3. Press seal (with lip pointing toward impeller bore) into seal bore in pump body. Ensure it is seated in bottom of seal bore. Lubricate seal lip with a small amount of grease.
4. Align impeller end of shaft with the seal and press shaft/bearing assembly into the bearing bore (push on bearing outer race). Install bearing retaining ring in retaining ring groove with concave side facing out toward drive end of shaft.
5. Apply a thin layer of sealant to screw threads and top of cam and install in body. Secure with cam screw.
6. Lubricate impeller bore with light coat of water pump grease and start impeller into bore with a rotary motion, until impeller screw engages slot in shaft, then push into bore.
7. Install O-ring and end cover. Secure with end cover screws.

DIMENSIONAL DRAWING INCHES (MILLIMETRES)

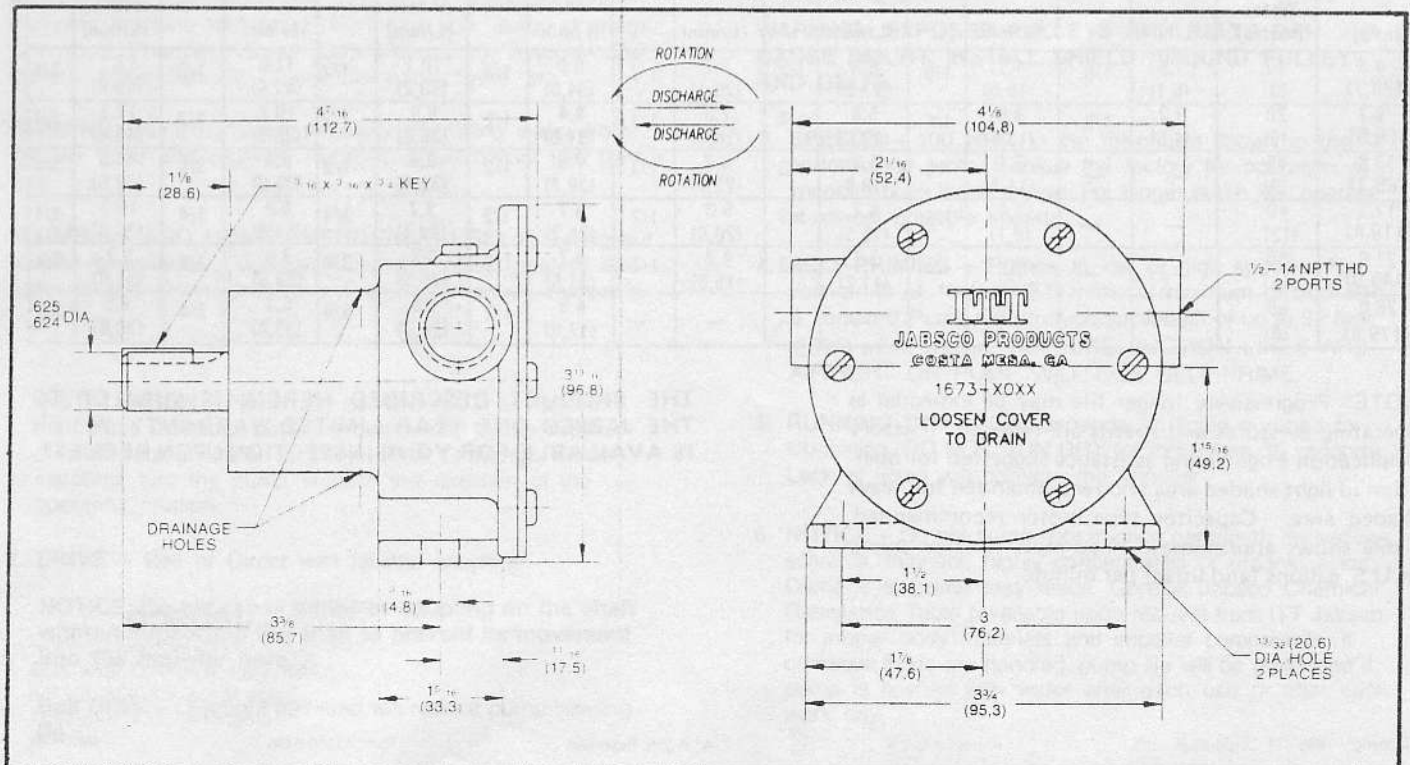

HEAD CAPACITY TABLES
1673-1001 NEOPRENE

| TOTAL HEAD | | 500 RPM | | 1160 RPM | | 1750 RPM | | 2100 RPM | | 2450 RPM | | 2750 RPM | | 3000 RPM | | 3600 RPM | |
|-----------------|-------------------------|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|
| P.S.I. (kPa) | Ft. of Water (metre) | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP |
| 4.3 (29.7) | 10 (3) | 3.0 (11.3) | 1/6 | 7.6 (28.7) | 1/4 | 11.0 (41.6) | 1/4 | 13.0 (49.2) | 1/3 | 15.2 (57.5) | 1/2 | 16.7 (63.2) | 1/2 | 18.0 (68.1) | 1/2 | 19.6 (74.2) | 3/4 |
| 8.7 (60.0) | 20 (6) | 1.8 (6.8) | 1/6 | 6.4 (24.2) | 1/4 | 10.0 (37.8) | 1/4 | 11.5 (43.5) | 1/3 | 13.7 (51.8) | 1/2 | 15.4 (58.3) | 1/2 | 17.0 (64.3) | 1/2 | 18.8 (71.1) | 3/4 |
| 13.0 (89.7) | 30 (9) | — | — | 4.8 (18.2) | 1/4 | 8.5 (32.2) | 1/3 | 10.0 (37.8) | 1/2 | 12.0 (45.4) | 1/2 | 13.6 (51.5) | 3/4 | 15.3 (57.9) | 3/4 | 17.5 (66.2) | 3/4 |
| 17.3 (119.4) | 40 (12) | — | — | 3.3 (12.5) | 1/4 | 6.7 (25.3) | 1/3 | 8.5 (32.2) | 1/2 | 10.4 (39.3) | 1/2 | 12.0 (45.4) | 3/4 | 13.5 (51.1) | 3/4 | 16.0 (60.5) | 1 |
| 21.6 (149.0) | 50 (15) | — | — | — | — | 5.0 (18.9) | 1/2 | 6.7 (25.3) | 1/2 | 8.5 (32.2) | 3/4 | 10.0 (37.8) | 3/4 | 11.8 (44.6) | 3/4 | 14.5 (54.9) | 1 |
| 26.0 (179.4) | 60 (18) | — | — | — | — | — | — | 5.0 (18.9) | 1/2 | 7.0 (26.5) | 3/4 | 8.3 (31.4) | 3/4 | 10.0 (37.8) | 3/4 | 13.0 (49.2) | 1 |
| 30.3 (209.1) | 70 (21) | — | — | — | — | — | — | — | — | — | — | 6.5 (24.6) | 3/4 | 8.0 (30.3) | 1 | 11.0 (41.6) | 1 |

1673-1003 NITRILE

| TOTAL HEAD | | 500 RPM | | 1160 RPM | | 1750 RPM | | 2100 RPM | | 2450 RPM | | 2750 RPM | | 3000 RPM | | 3600 RPM | |
|-----------------|-------------------------|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|
| P.S.I. (kPa) | Ft. of Water (metre) | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP |
| 4.3 (29.7) | 10 (3) | 2.2 (8.3) | 1/6 | 5.8 (21.9) | 1/4 | 9.5 (35.9) | 1/4 | 11.5 (43.5) | 1/3 | 13.3 (50.3) | 1/2 | 15.0 (56.8) | 1/2 | 16.0 (60.5) | 1/2 | 18.2 (68.9) | 3/4 |
| 8.7 (60.0) | 20 (6) | — | — | 4.3 (16.3) | 1/4 | 7.6 (28.7) | 1/3 | 9.4 (35.6) | 1/3 | 11.4 (43.1) | 1/2 | 13.0 (49.2) | 1/2 | 14.4 (54.5) | 1/2 | 17.0 (64.3) | 3/4 |
| 13.0 (89.7) | 30 (9) | — | — | 2.5 (9.4) | 1/4 | 6.0 (22.7) | 1/3 | 7.4 (28.0) | 1/2 | 9.3 (35.2) | 1/2 | 11.0 (41.6) | 1/2 | 12.6 (47.7) | 3/4 | 15.3 (57.9) | 3/4 |
| 17.3 (119.4) | 40 (12) | — | — | — | — | 4.2 (15.9) | 1/2 | 5.6 (21.2) | 1/2 | 7.5 (28.4) | 1/2 | 9.2 (34.8) | 3/4 | 10.8 (40.9) | 3/4 | 13.6 (51.5) | 1 |
| 21.6 (149.0) | 50 (15) | — | — | — | — | — | — | 3.9 (14.7) | 1/2 | 5.7 (21.6) | 3/4 | 7.2 (27.2) | 3/4 | 9.0 (34.0) | 3/4 | 11.7 (42.3) | 1 |
| 26.0 (179.4) | 60 (18) | — | — | — | — | — | — | — | — | — | — | 5.5 (20.8) | 3/4 | 7.1 (26.9) | 3/4 | 9.7 (36.7) | 1 |

1673-1051 HALF CAM, NEOPRENE

| TOTAL HEAD | | 500 RPM | | 1160 RPM | | 1750 RPM | | 2100 RPM | | 2450 RPM | | 2750 RPM | | 3000 RPM | | 3600 RPM | |
|-----------------|-------------------------|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|----------------|-----|
| P.S.I. (kPa) | Ft. of Water (metre) | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP | GPM (L/min) | HP |
| 4.3 (29.7) | 10 (3) | 1.6 (6.1) | 1/6 | 4.1 (15.5) | 1/6 | 6.3 (23.8) | 1/4 | 7.7 (29.1) | 1/3 | 9.0 (34.0) | 1/3 | 10.1 (38.2) | 1/2 | 11.0 (41.6) | 1/2 | 13.1 (49.6) | 3/4 |
| 8.7 (60.0) | 20 (6) | 1.2 (4.5) | 1/6 | 3.6 (13.6) | 1/6 | 5.8 (22.0) | 1/4 | 7.0 (26.5) | 1/3 | 8.4 (31.8) | 1/2 | 9.5 (35.9) | 1/2 | 10.2 (38.6) | 1/2 | 12.3 (46.5) | 3/4 |
| 13.0 (89.7) | 30 (9) | — | — | 3.1 (11.7) | 1/6 | 5.0 (18.9) | 1/3 | 6.2 (23.4) | 1/3 | 7.6 (28.7) | 1/2 | 8.6 (32.6) | 1/2 | 9.4 (35.6) | 3/4 | 11.3 (42.8) | 3/4 |
| 17.3 (119.4) | 40 (12) | — | — | 2.4 (9.1) | 1/6 | 4.1 (15.5) | 1/3 | 5.3 (20.0) | 1/2 | 6.7 (25.3) | 1/2 | 7.7 (29.1) | 3/4 | 8.9 (33.8) | 3/4 | 10.3 (39.0) | 3/4 |
| 21.6 (149.0) | 50 (15) | — | — | — | — | 3.1 (11.7) | 1/3 | 4.2 (15.9) | 1/2 | 5.7 (21.5) | 1/2 | 6.7 (25.3) | 3/4 | 7.4 (28.0) | 3/4 | 9.2 (34.8) | 3/4 |
| 26.0 (179.4) | 60 (18) | — | — | — | — | — | — | — | — | 4.5 (17.0) | 1/2 | 5.6 (21.2) | 3/4 | 6.3 (23.8) | 3/4 | 8.1 (30.6) | 3/4 |

NOTE: Progressively longer life may be expected as operating pressures and speeds are reduced. Factory Application Engineering assistance suggested for operation in light shaded area and recommended for heavy shaded area. Capacitor type motor recommended. Table shows approximate Head-Flow for new pump in U.S. gallons (and litres) per minute.

THE PRODUCT DESCRIBED HEREIN IS SUBJECT TO THE JABSCO ONE YEAR LIMITED WARRANTY, WHICH IS AVAILABLE FOR YOUR INSPECTION UPON REQUEST.


 ITT Fluid Technology Corporation
 1485 Dale Way P.O. Box 2158
 Costa Mesa, CA 92628-2158
 Telephone: (714) 546-8251