

Key	Description	Replacement Part Number	
1	Adaptor	28523-1100	
2	Cart Assembled	52804-1000	
3	End cover	18753-0374	
4	Hex head screw (4)	18753-0285	
5	Hex head screw (4)		
6	Impeller	8984-0005	
7	Motor	52811-1000	
8	O Ring	18753-0267	
9	Body	28504-1100	
10	Seal Seat	18753-0237	
11	Seal Mech	18753-0253	
12	Spacer (4)	28638-1001	
13	Washer	91613-0146	
14	Wearplate	18753-0202	
15	VFD Inverter	52812-1000	
16	Wheel Chock and Cable	52808-1000	

**PRIMING.** Be sure suction lines are airtight or pump will not self prime.

**DISCHARGE**. When transferring liquids further than 25 feet, use one size larger discharge line than discharge port size.

**RUNNING DRY.** Unit depends on liquid pumped for lubrication. DO NOT RUN DRY for more than 30 seconds. Lack of liquid will damage the impeller.

**TEMPERATURES.** The operating temperature limits of the pump depend on the impeller compound. The following ranges apply:

EPDM - 45° to 185° F (7° to 85° C).

**CLEANING.** Before using pump, it should be disassembled and cleaned to remove any dust and dirt resulting from storage or shipping. Wash parts in standard cleaning solutions approved for handling stainless steel. Thoroughly rinse before reassembly.

**DO NOT USE IODINE BASED SANITIZERS** as the iodine attacks the elastomer materials used in the impeller.

All parts have been expertly machined and polished. HANDLE WITH CARE. DO NOT DROP OR MISHANDLE.



### www.jabsco.com

UNITED STATES East Coast Tel: +1 978 281 0440 Fax: +1 978 283 2619

West Coast Tel: +1 714 557 4700 Fax: +1 714 628 8478


UNITED KINGDOM Tel: +44 (0) 1992 450 145 Fax: +44 (0) 1992 467 132

GERMANY Tel: +49 (0) 40 53 53 73 0 Fax: +49 (0) 40 53 53 73 11

ITALY Tel: +39 039 6852323 Fax: +39 039 666307

JAPAN Tel: +81 (0) 45 475 8906 Fax: +81 (0) 45 477 1162

CHINA Tel: (86)21 2208 2888 Fax: (86)21 2208 2999

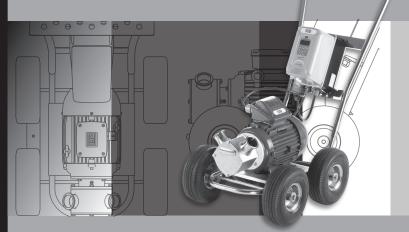



THE PRODUCT DESCRIBED HEREIN IS SUBJECT TO THE JABSCO ONE YEAR LIMITED WARRANTY, WHICH IS AVAILABLE FOR YOUR INSPECTION UPON REQUEST.

© Copyright 2011 ITT Corporation

950-0750 Rev A. 4/2011



# 

## FLEXIBLE IMPELLER PUMP CART SYSTEM

Carted pump/VFD system with no remote 52800-1105

Carted pump/VFD system with wired remote 52800-2105

Carted pump/VFD system with wireless remote 52800-3105

Pump Head, Flange, Motor 52800-4105

Pump Head, Flange, Motor VFD 52800-5105





## FLEXIBLE IMPELLER PUMP CART SYSTEM

### SAFETY

This section highlights safety warnings for this product. Warnings listed in this section will be referenced throughout this document. Please review and understand the entire manual before using this product.

28 SERIES



Many components are charged with high voltage and/or in movement (fans), even after the incoming AC power supply has been disconnected or switched OFF. Wait at least 10 minutes for the total discharge of the power capacitors.

Always connect the frame of the equipment to the ground (PE) at the suitable connection point.



All electronic boards have components that are sensitive to electrostatic discharges. Never touch any of the electrical components or connectors without following proper grounding procedures. If necessary to do so, touch the properly grounded metallic frame or use a suitable ground strap.

No motor or VFD service should be conducted in the field. All inquiries on service for these units should be directed to technical support: 1-877-934-3748

Wireless remote control functions on a 9 VDC battery accessed through the rear battery compartment panel on the hand held remote. For extended battery life, it is recommended to remove the battery if the cart is not to be used for long periods.

### DISASSEMBLY

1. Remove the four end cover screws. Remove end cover and O-ring.

- 2. Remove the four screws, holding the body to the motor adapter flange. Slide body, complete with impeller and wear-plate, from motor shaft assembly.
- Remove mechanical seal by inserting two screwdrivers behind seal collar, and gently lever collar and seal assembly forward on shaft. Use extreme care not to mar shaft surface.
- 4. Remove seal seat and rubber cup from recess in wear-plate.

### ASSEMBLY

- Replace mechanical seal by sliding spacer (if new spacer is required or old spacer was removed) onto shaft up to locating shoulder, then lubricate shaft with sanitary lubricant.
- 2. Push on seal gently until it engages with spacer.
- 3. Fit rubber cup and seal seat into wearplate.
- 4. Insert impeller in pump body.
- 5. Fit O-ring in each end of the pump body.
- 6. Fit wear-plate to body.
- 7. Slide wear-plate and body assembly over shaft.
- 8. Tighten screws to hold body to adapter flange. Torque screws to 10 in. lbs
- 9. Fit end cover, with cover o-ring and end cover screws to body. Torque screws to 60 in. lbs.

The pump is reversible utilizing the directional change button on the VFD or by reversing the impeller manually.

Changing Pump Rotation (looking at end cover):

Clockwise Rotation: Insert impeller into pump body with blades bending counterclockwise

Counterclockwise Rotation: Insert impeller into pump body with blades bending clockwise.



**VERAFLEX**<sup>TM</sup>

# FLEXIBLE IMPELLER PUMP CART SYSTEM HYGIENIC STAINLESS STEEL HEAD PUMP 2"

Specifications and Features		
Pump Type	Close Coupled, 3A	
Body	316 Grade Stainless Steel	
Impeller	Sanitary Neoprene	
Shaft Seal	Mechanical; Carbon-on-Ceramic	
Ports	2″ Tri-clamp type	
Shaft	316 Grade Stainless Steel	
Motor	50Hz, 3 HP 112 IEC Frame, Washdown rated, 230 VAC 3 Phase. Maximum RPM 1000.	
Variable Frequency Drive	230 VAC 1 Phase input, 50 / 60 Hz	
Wireless Remote	Operates on standard 9 VCD battery	
Weight pump head	30.0 lb (13.6 kg)	
Weight complete unit	159 lb (72.0 kg)	
Self primes from dry up to	15' (4.5 meters)	
Flows up to	60 GPM (228 LPM)	
Pressure up to	37 PSI (2.5 Bar)	
Handles viscosities up to	10,000 centipoises	
Close coupled hygenics SS p 4 wheel cart.	ump head/motor/VDF assembly mounted on a	

### Certified to US 3A.

Easy strip clean

Minimal shear to thixotropic fluids

Includes basket for fittings, and O-rings

Includes power cord and remote wire retaining brackets (Plug is supplied by customer).

### **Operating Instructions**

Pump with the Variable Frequency Drive (VFD) will operate from 0 GPM to 60 GPM utilizing the speed control on the wired remote or wireless remote to increase or decrease the motor speed. Please reference WEG CFW-08 manual.

#### **VFD** Operation

The VFD is pre-programmed at the factory to meet specification compatible with the pump/motor assembly. No change to the program is possible.

For codes generated on the display of the VFD, or issues that may arise, please see the included WEG manual detailing operations and safety requirements associated with the VFD. The standard CFW-08 keypad has a LED display with 4 digits of 7 segments, 4 status LEDs and 8 keys.

Functions of the LED display: The LED display shows the fault codes and drive status (refer to Quick Parameter Reference, Fault Messages, page 8 – 16 – WEG manual)

Functions of the "Local" and "Remote" LEDs: pages 67 - 71

Functions of the FWD/REV LEDs - Direction of rotation pages 67 - 71

Basic functions of the keys: pages 67 - 71

### Pump Cart Maintenance


Pump cart tires are inflatable, Follow max recommended pressures as listed on the tires.

Cart handle height is adjustable to three levels by removing the socket heat cap screws on the vertical riser of the handle tube and adjusting to meet the pre-drilled holes, then reinserting the screws to tighten.


Performance Curve

LTR 7426 Wine Cart Performance Test with 8984-0005



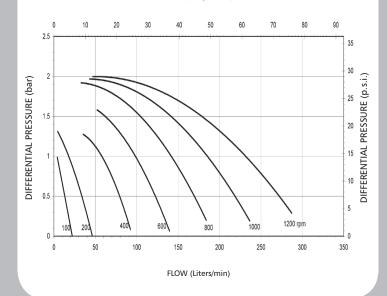

### Dimensions

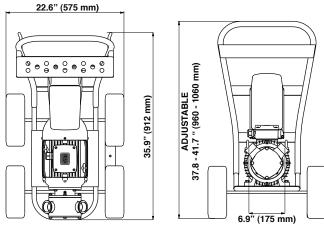

Top View

Front View

