


JABSCO® PUMPS

How to Install Vacuum Switch
Kit No. 17465-0000 on
Jabsco AC Macerator No. 17460-0003

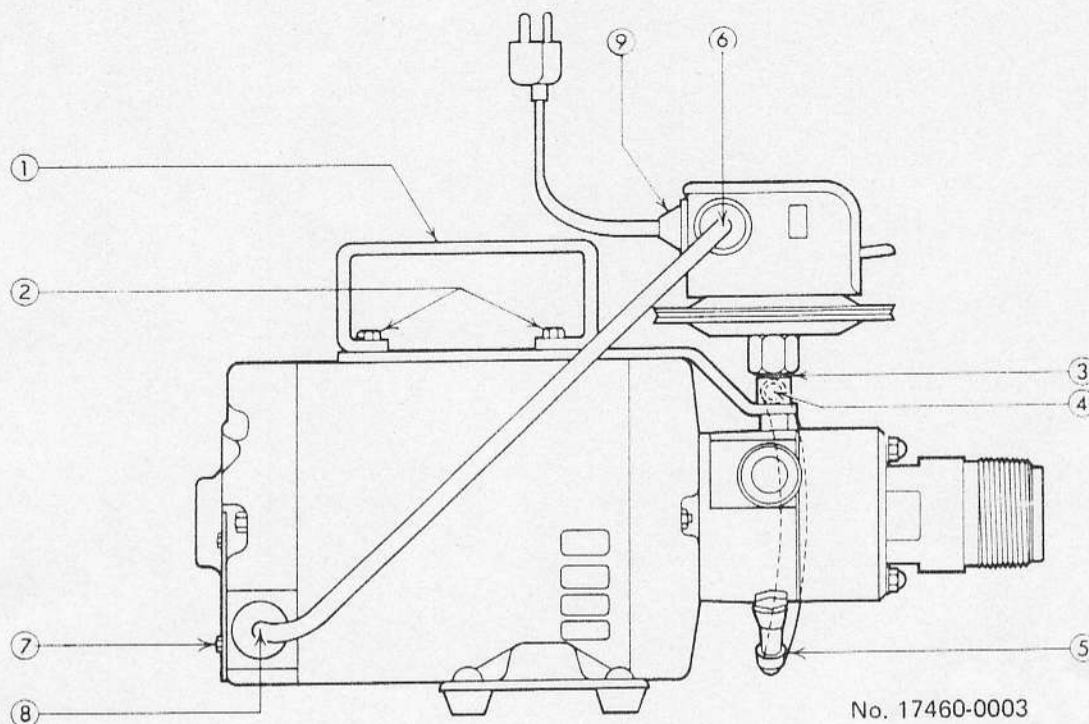

JABSCO
Kit No. 17465-0000 on
Jabsco AC Macerator No. 17460-0003

INSTALLATION:

- ① Remove handle from top of motor and place bracket for mounting switch on top of the motor.
- ② Secure bracket and handle with two hex-head screws provided.
- ③ Install switch on elbow located at the end of mounting bracket.
- ④ Connect plastic hose to base of switch.
- ⑤ Install plastic elbow in under side of pump body and slip plastic hose over end of elbow.
- ⑥ Remove switch cover from switch, connect pigtail wire to motor side.
- ⑦ Remove end cover from rear of motor and disconnect AC cord.
- ⑧ Connect pigtail to rear of motor and replace cover.
- ⑨ Connect AC cord to the line side of switch, replace switch cover.

OPERATION:

To operate: Connect pump and switch to AC 110 volt power.

Make sure adequate voltage and current capacity is available.

Press lever on vacuum switch down for a few seconds to start the pump. (The lever will stay down as long as the unit is pumping. When the tank is completely pumped out it will shut off automatically.)

NOTE: If lever will not stay down on start-up, check to be sure suction nozzle is airtight and that there is liquid in the tank.

DO NOT HOLD LEVER DOWN FOR MORE THAN 15 SECONDS. DOING SO WILL RUN PUMP DRY, CAUSING DAMAGE TO THE IMPELLER.

JABSCO PRODUCTS **ITT**

Marine and Recreation Components Division
International Telephone and Telegraph Corporation
1485 Dale Way, Costa Mesa, California 92626 Phone 714/545-8251