

# 5DX PLUNGER PUMP SERVICE MANUAL



## PLUNGER PUMP MODELS: 5DX30G1, 5DX35G1, 5DX40G1

**CAUTION:** CAT PUMPS are positive displacement pumps. Therefore, a properly designed pressure RELIEF OR SAFETY VALVE MUST BE INSTALLED in the discharge piping. Failure to install such a relief

mechanism could result in personal injury or damage to the pump or system. CAT PUMPS does not assume any liability or responsibility for the operation of a customer's high pressure system.

## INSTALLATION AND START-UP INFORMATION

Optimum performance of the pump is dependent upon the entire fluid system and will be obtained only with the proper selection, installation of plumbing and operation of the pump and accessories.

**SPECIFICATIONS:** Maximum specifications refer to individual attributes. It is **not** implied that **all maximums** can be performed **simultaneously**. If more than one maximum is considered, check with your CAT PUMPS supplier to confirm the proper performance and pump selection.

**LUBRICATION:** Fill crankcase with special CAT PUMP Hydraulic oil per pump specifications. DO NOT RUN PUMP WITHOUT OIL IN CRANKCASE. Change initial fill after 50 hours running period. Thereafter, change oil every **3 months or 500 hour intervals**.

**DRIVE SELECTION:** The pump shaft size is a 1" gas shaft. The engine driving the pump must be of adequate horsepower to maintain full RPM when the pump is under load. Select the horsepower requirement according to required pump discharge volume and maximum **pressure at the pump!** Consult the manufacturer of gas or diesel engine for selection of the proper engine.

**MOUNT THE PUMP:** All 5DX models are direct drive and do not need to be mounted to another surface. To minimize piping stress, **use appropriate flexible hose to inlet and discharge ports**. Before mounting pump to gas engine, apply PN 6106 antiseize lubricant to pump shaft. Refer to Technical Bulletin #55 for instructions on removing pump from gas engine.

**LOCATION:** If the pump is used in extremely dirty or humid conditions, it is recommended pump be enclosed. Do not store or operate in excessively high temperature areas or without proper ventilation.

**INLET CONDITIONS:** Refer to complete **Inlet Condition Check-List** in this manual before starting system. DO NOT STARVE THE PUMP OR RUN DRY.

**DISCHARGE PLUMBING:** OPEN ALL VALVES BEFORE STARTING SYSTEM to avoid deadhead overpressure condition and severe damage to the pump or system.

A **reliable Pressure Gauge** should be installed near the discharge outlet of the high pressure manifold. This is extremely important for adjusting

pressure regulating devices and also for proper sizing of the nozzle or restricting orifice. The pump is rated for a maximum pressure; this is the **pressure** which would be **read at the discharge manifold of the pump, NOT AT THE GUN OR NOZZLE** end of a long hose.

All 5DX models come complete with a modular Pressure Regulating Unloader with built-in by-pass. **A Pressure Regulator or Unloader Valve must be installed on the pump to prevent over pressure** in the event the discharge or downstream plumbing becomes plugged or is turned off. Severe damage to the pump will result if this condition occurs without a relief valve in the line. **CAUTION: Failure to install such a safety valve will void the warranty on the pump. Discharge regulating devices should be at minimum pressure setting at start-up.** On systems over 2000 PSI SECONDARY PROTECTION is recommended by installing a pop-off valve, safety valve or rupture disc. START SYSTEM WITH ALL VALVES OPEN OR IN THE LOW PRESSURE SETTING.

Use PTFE liquid (sparingly) or tape to connect accessories or plumbing. Exercise caution not to wrap tape beyond the last thread to avoid tape from becoming lodged in the pump or accessories. This condition will cause a malfunction of the pump or system.

**NOZZLES:** A worn nozzle will result in loss of pressure. Do not adjust pressure regulating device to compensate. Replace nozzle and reset regulating device to system pressure.

**PUMPED FLUIDS:** Some fluids may require a **flush between operations or before storing**. For pumping fluids other than water, contact your CAT PUMPS supplier.

**STORING:** For extended storing or between use in cold climates, drain all pumped fluids from pump and **flush with antifreeze solution to prevent freezing and damage** to the pump. DO NOT RUN PUMP WITH FROZEN FLUID.

Products described hereon are covered by one or more of the following U.S. patents 3558244, 3652188, 3809508, 3920356, 3930756 and 5035580

### World Headquarters

CAT PUMPS

1681 - 94th Lane N.E. Minneapolis, MN 55449-4324

Phone (612) 780-5440 — FAX (612) 780-2958

e-mail: sales@catpumps.com

www.catpumps.com

### International Inquiries

FAX (612) 785-4443

e-mail: intlsales@catpumps.com



### • CAT PUMPS (U.K.) LTD. •




1 Fleet Business Park, Sandy Lane, Church Crookham, Fleet  
Hampshire GU13 0BF, England  
Phone Fleet 44 1252-622031 — Fax 44 1252-626655

### • CAT PUMPS INTERNATIONAL N.V. •

Gemzenstraat 2 Wilrijk, B 2610 Antwerp, Belgium  
Phone 32-3-449.39.70 — Fax 32-3-449.39.76  
e-mail: cat.pumps@belcom.be




### • CAT PUMPS DEUTSCHLAND GmbH •

Buchwiese 2, D-65510 Idstein, Germany  
Phone 49 6126-93030 — Fax 49 6126-930333  
FAXLINE: 49 40 53567778

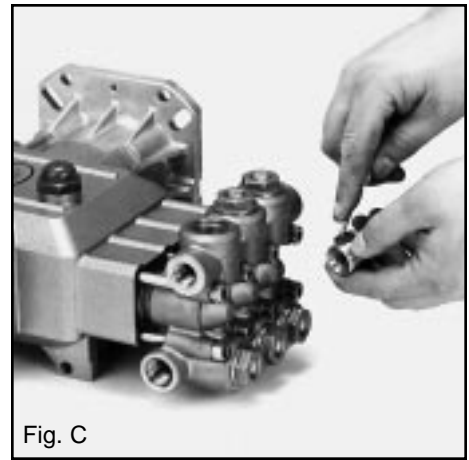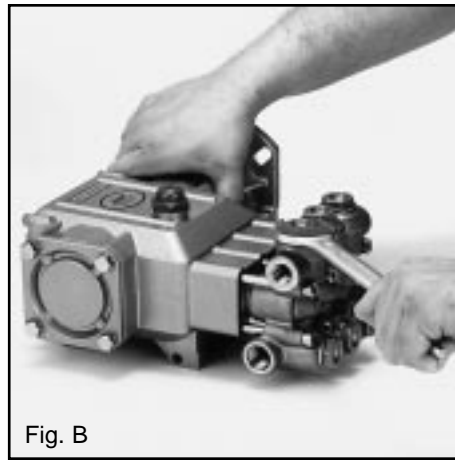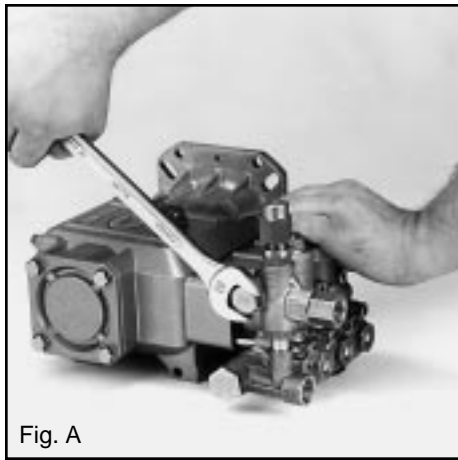

## SERVICING THE VALVES

1. Check oil for proper level, presence of water or discoloration and replace as needed.
2. Disconnect all plumbing and use an M24 Wrench on the top unloader screw and an M27 on the bottom unloader screw to remove the unloader before servicing. (Fig. A)
3. Using an M22 hex tool, remove the top discharge and bottom inlet Valve Plugs. (Fig. B)
4. Examine the O-ring under the plug for cuts or distortion and replace if worn. Lubricate the new O-rings before installing. (Fig. C)
5. Using a pliers, grasp the Spring Retainer by the tab at the top and remove from the valve chamber. (Fig. D) Usually the valve assembly will remain together while being removed. To separate the valve assembly, insert a screw driver into the side of the Retainer and press on the back side of the Valve to begin the separation, then between the Retainer and Valve Seat to separate completely.  
If the Valve assembly separates during removal, remove the spring and valve with a needle nose pliers. Then with a reverse pliers, remove the Valve Seat from the valve chamber.
6. Next remove the Valve Seat O-ring, which usually stays at the bottom of the valve chamber. Exercise caution to avoid damage to the valve chamber walls.
7. Examine all valve parts for pitting, gouges or general wear and replace with preassembled Valve Assembly in the service kit which contains Spring Retainers, Springs, Valves, Valve Seats and O-rings (Fig. E)

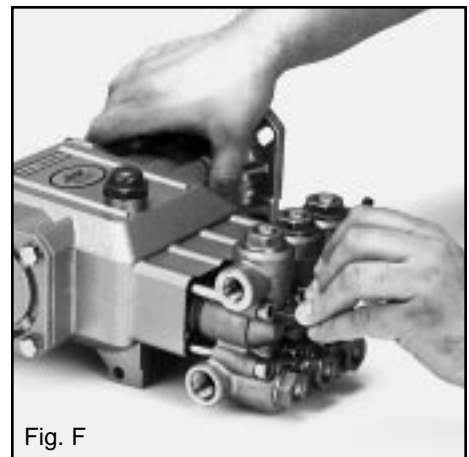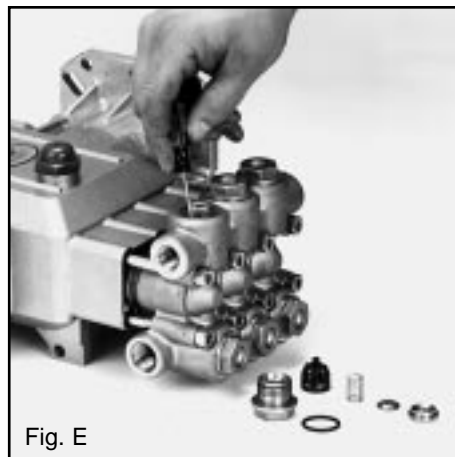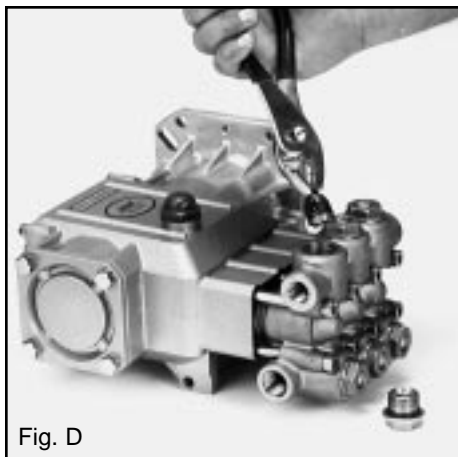

NOTE: Inlet and Discharge Valve Assemblies are interchangeable. **Two Valve Kits** are needed for a complete valve change.




8. With a pliers grasp the new Valve Assembly by the tab at the top, immerse in oil and push into the valve chamber. Be certain the valve assembly is completely seated in the valve chamber.
9. Apply Loctite 242 to the threads of the Valve Plugs, thread into the manifold port and torque per chart.

## SERVICING THE PUMPING SECTION

1. Using an M6 Allen Tool remove the socket head bolts from the face of the manifold head. (Fig. F)
2. Insert a flat head screw driver between the crankcase and manifold head and gently apply light pressure to the head to assist in separation. (Fig. G)
3. Then supporting the manifold from the underside, work the manifold head from the plungers. (Fig. H)  
**CAUTION:** Keep the manifold head properly aligned with the ceramic plungers when removing to avoid damage to either the plungers or seals.
4. Examine the Ceramic Plungers for cracks or scoring and refer to **SERVICING THE PLUNGERS** if replacement is needed.

### Reassembly

1. Generally the Ceramic Plungers do not need to be replaced. They can be cleaned with a non-abrasive cleaner to remove any foreign build-up.

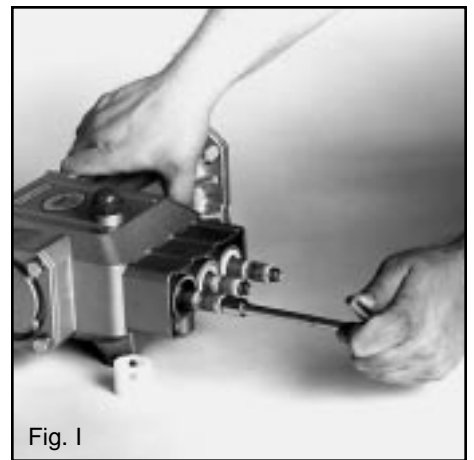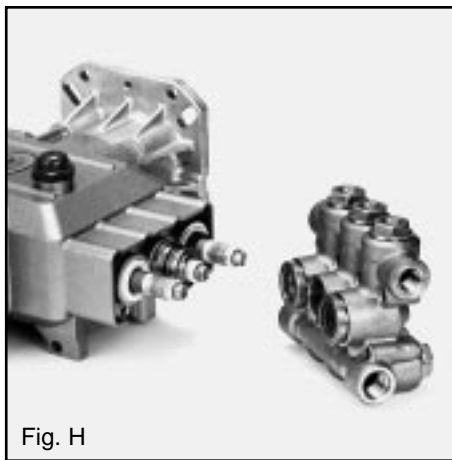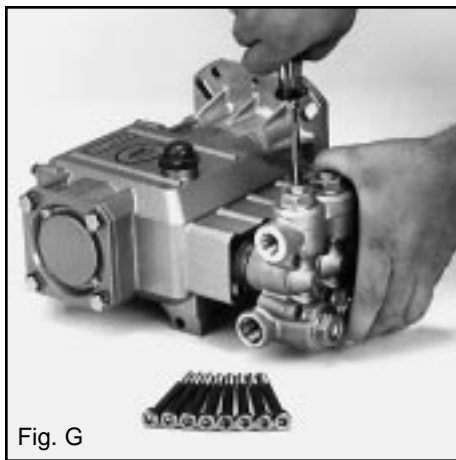

2. Turn the shaft by hand to line up the plungers so the end plungers are parallel.
3. Lightly lubricate the plungers and carefully slide the Manifold Head onto the Ceramic Plungers, supporting it from the underside to avoid damage to the plungers or seals. Press the Manifold Head into the Crankcase until flush.
4. Replace the Hex Socket Head Bolts and torque per chart.

## SERVICING THE PLUNGERS

### Disassembly

1. Remove the Manifold Head as described in **SERVICING THE PUMPING SECTION**.
2. First remove the Seal Retainers from each Plunger Rod.
3. Using an M10 hex tool, loosen the Plunger Retainer Stud from the Plunger Rod (about three or four turns). Push the Ceramic Plunger back to separate it from the Plunger Retainer Stud and finish unthreading the Plunger Retainer by hand. (Fig. I)
4. Next remove the Ceramic Plunger, Sealing Gasket and Barrier Slinger from the Plunger Retainer Stud. (Fig. K)

NOTE: Refer to Tech Bulletin 71 for additional information on Ceramic Plungers.

### Reassembly

1. Visually inspect the Crankcase Oil Seal for deterioration or leaks and contact the factory for assistance with replacement. This Oil Seal seldom needs replacement. If frequent

deterioration is observed, shorten the time between servicing the seals. **DO NOT RUN THE PUMP WITH WORN SEALS.**

2. Examine the Sealing Gasket and replace if cut or worn. Then install the new Sealing Gasket onto the Plunger Retainer Stud.
3. Examine the Ceramic Plungers for scoring or cracks and replace if worn or damaged.




NOTE: **The Ceramic Plunger can be installed in either direction.** Slide the Ceramic Plunger onto the Plunger Retainer Stud.




4. Then examine the Barrier Slinger for cuts or wear and replace as needed. Install the Barrier Slinger onto the Ceramic Plunger and press to the back of the plunger.
5. Apply Loctite 242 to the exposed threads and thread the Plunger Retainer Stud with Ceramic Plunger into the Plunger Rod. Torque per chart.
6. Install the Seal Retainers onto the exposed Ceramic Plungers with the holes to the top and bottom and forward (Fig. L) and press into the Crankcase. (Fig. M)
7. Proceed with **SERVICING THE SEALS AND V-PACKINGS** or remount the Manifold Head.

## SERVICING THE SEALS AND V-PACKINGS

### Disassembly

1. Remove the Manifold Head as described in **SERVICING THE PUMPING SECTION**.

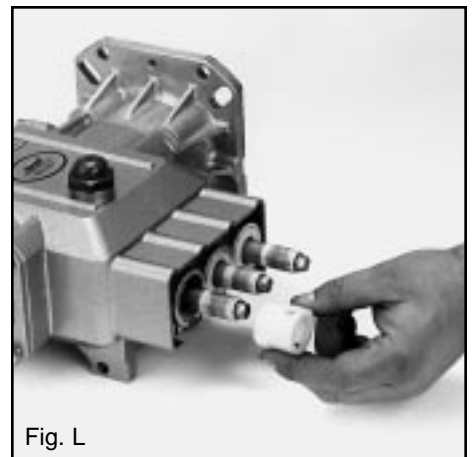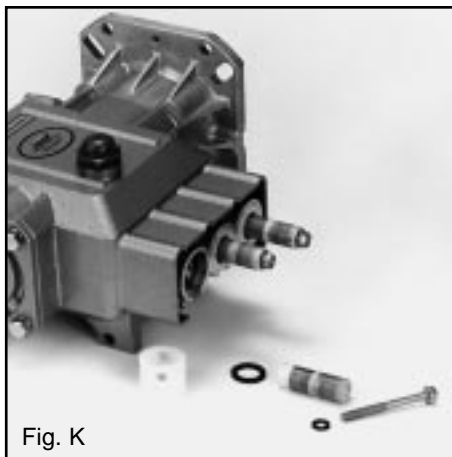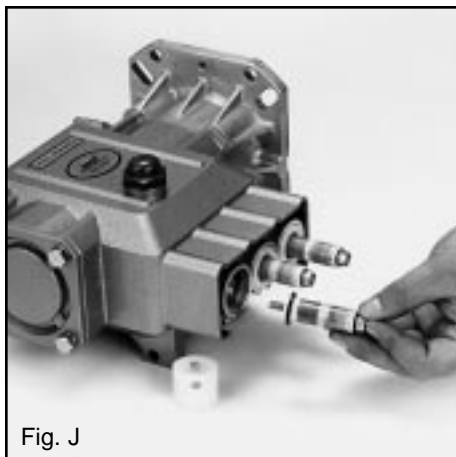

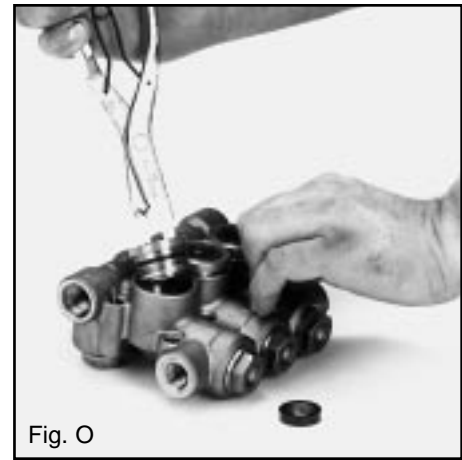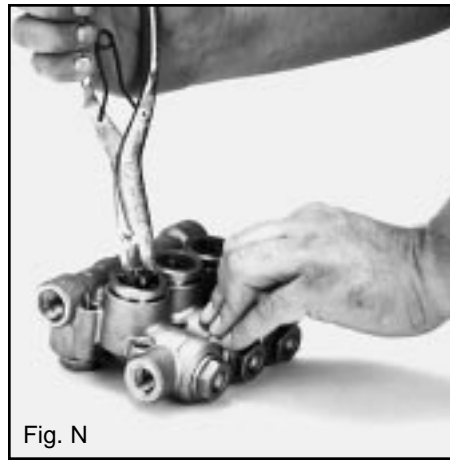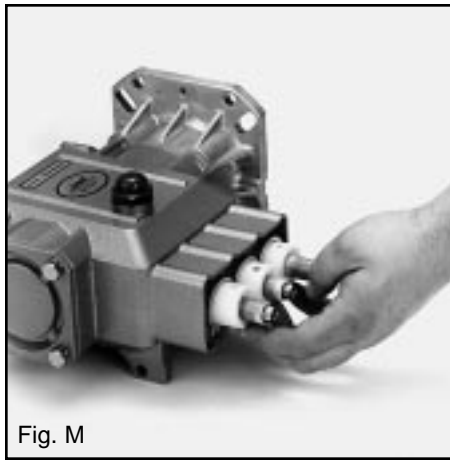

NOTE: The Seal Case may stay in the manifold or on the ceramic plunger

2. With the **crankcase side of the Manifold Head up**, use a reverse pliers to remove the Lo-Pressure Seal from the Seal Case. (Fig. N)

3. Next using the reverse pliers, remove the Seal Case from the manifold chamber. (Fig. O)

NOTE: Insert the pliers into the second lip to avoid damage to the Seal Case.

4. Next remove the O-ring from the outer groove on the Seal Case. Carefully insert a small screw driver under the O-ring and roll the O-ring off the Seal Case. (Fig. P)

5. The V-Packings and Male Adapter can be easily removed from the manifold chamber by hand or with a reverse pliers. (Fig. Q)

### Reassembly

1. Examine the manifold chamber walls for any scale build up or damage. Then lubricate the chamber walls.

2. Insert the Male Adapter with **notches down and the "V" side up** and by hand, press completely into the manifold chamber.

3. Lubricate the V-Packings and install by hand into the manifold chamber with the **grooved side down**. (Fig. R)

4. Lubricate the new Seal Case O-ring before installing and insert the Seal Case into the manifold chamber.

5. Examine the Lo-Pressure Seals for wear or broken spring and replace as needed.

6. Install the Lo-Pressure Seal into the Seal Case with the **garter spring down**.

7. Next install the Seal Retainer over the Ceramic Plungers with the holes to the top and bottom and forward.

8. Replace the Manifold Head onto the drive end as described under **SERVICING THE PUMPING SECTION** and torque per chart.

### SERVICING THE CRANKCASE SECTION

1. While manifold, plungers and seal retainers are removed, examine crankcase seals for wear.

2. Check oil level and for evidence of water in oil.

3. Rotate crankshaft by hand to feel for smooth bearing movement.

4. Examine crankshaft oil seal externally for drying, cracking or leaking.

5. Consult factory or your local distributor if crankcase service is evidenced.

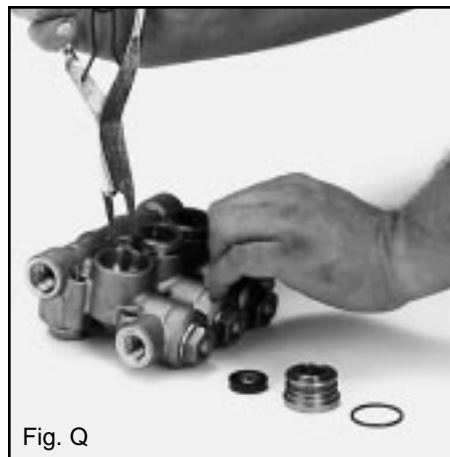
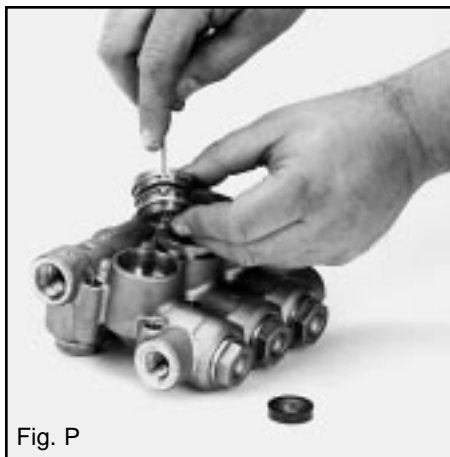


Fig. P

Fig. Q

Fig. R

PREVENTATIVE MAINTENANCE CHECK-LIST					
Check	Daily	Weekly	50 hrs.	500 hrs.*	1500 hrs.**
Clean Filters	x				
Oil Level/Quality	x				
Oil Leaks	x				
Water Leaks	x				
Belts, Pulley		x			
Plumbing		x			
Initial Oil Change			x		
Oil Change				x	
Seal Change					x
Valve Change					x

\*If other than CAT PUMPS special multi-viscosity ISO68 oil is used, change cycle should be every 300 hours.

\*\*Each system's maintenance cycle will be exclusive. If system performance decreases, check immediately. If no wear at 1500 hours, check again at 2000 hours and each 500 hours until wear is observed.

TORQUE CHART					
Pump Item	Thread	Tool Size [Part No.]	Torque in.lbs. ft.lbs. Nm		
<b>Plunger Retainer</b>	M6	M10 Hex [25082]	55	4.4	6.2
<b>Flow-Thru Screws</b>					
Inlet	—	1/2" Hex	560	45	60
Discharge	—	3/8" Hex	560	45	60
<b>Manifold Head Bolts</b>	M8	M6 Allen [30941]	115	9.4	13
<b>Valve Plugs</b>	M22	M24 Hex [44046]	870	72.3	100
<b>Crankcase Cover Screws</b>	M6	M10 Hex [25082]	50	4.0	6
<b>Bearing Cover Screws</b>	M8	M13 Hex [25324]	115	9.4	13
<b>Bubble Oil Gauge</b>	M28	Oil Gauge Tool [44050]	45	3.6	5

TECHNICAL BULLETIN REFERENCE CHART	
<b>024</b>	Lubrication of Lo-Pressure Seals
<b>036</b>	Cylinder and Plunger Reference Chart
<b>043</b>	Plunger Pumps Lo and Hi Pressure Seal Servicing
<b>053</b>	Liquid Gasket - Plunger Pump Models
<b>060</b>	Baffle Assembly
<b>074</b>	Master Torque Chart

## INLET CONDITION CHECK-LIST

### Review Before Start-Up

Inadequate inlet conditions can cause serious malfunctions in the best designed pump. Surprisingly, the simplest of things can cause the most severe problems or go unnoticed to the unfamiliar or untrained eye. REVIEW THIS CHECK-LIST BEFORE OPERATION OF ANY SYSTEM. Remember, no two systems are alike, so there can be no **ONE** best way to set-up a system. All factors must be carefully considered.

**INLET SUPPLY** should be adequate to accommodate the maximum flow being delivered by the pump.

- Open inlet shut-off valve and turn on water supply to avoid starving the pump. **DO NOT RUN PUMP DRY.**
- Avoid closed loop systems especially with high temperature, ultra-high pressure or large volumes. Conditions vary with regulating/unloader valve.
- Low vapor pressure fluids, such as solvents, require a booster pump and C. A. T. (Captive Acceleration Tube) to maintain adequate inlet supply.
- Higher viscosity fluids require a positive head and a C. A. T. (Captive Acceleration Tube) to assure adequate inlet supply.
- Higher temperature fluids tend to vaporize and require positive heads and C. A. T. (Captive Acceleration Tube) to assure adequate inlet supply.
- When using an inlet supply reservoir, size it to provide adequate fluid to accommodate the maximum output of the pump, generally a minimum of 6-10 times the GPM (however, a combination of system factors can change this requirement); provide adequate baffling in the tank to eliminate air bubbles and turbulence; install diffusers on all return lines to the tank.

**INLET LINE SIZE** should be adequate to avoid starving the pump.

- Line size must be a minimum of one size larger than the pump inlet fitting. Avoid thick walled fittings, tees, 90 degree elbows or valves in the inlet line of the pump to reduce the risk of flow restriction and cavitation.
- The line **MUST** be a FLEXIBLE hose, NOT a rigid pipe, and reinforced on SUCTION systems to avoid collapsing.
- The simpler the inlet plumbing the less the potential for problems. Keep the length to a minimum, the number of elbows and joints to a minimum (ideally no elbows) and the inlet accessories to a minimum.
- Use pipe sealant to assure air-tight, positive sealing pipe joints.

**INLET PRESSURE** should fall within the specifications of the pump.

- Acceleration loss of fluids may be increased by high RPM, high temperatures, low vapor pressures or high viscosity and may require pressurized inlet and C. A. T. (Captive Acceleration Tube) to maintain adequate inlet supply.
- Optimum pump performance is obtained with +20 PSI (1.4 BAR) inlet pressure and a C. A. T. for certain applications. With adequate inlet plumbing, most pumps will perform with flooded suction. Maximum inlet pressure is 75 PSI (4 BAR). **DO NOT USE C. A. T. (Captive Acceleration Tube) WITH SUCTION INLET.**
- After prolonged storage, pump should be purged of air to facilitate priming. Disconnect any discharge port and allow fluid to pass through pump.

**INLET ACCESSORIES** are designed to protect against overpressurization, control inlet flow, contamination or temperature and provide ease of servicing.

- A shut-off valve is recommended to facilitate maintenance.
- Installation of a C. A. T. (Captive Acceleration Tube) is essential in applications with stressful conditions such as high temperatures, booster pump feed or long inlet lines. **Do not use C. A. T. with negative inlet pressure.**
- A stand pipe can be used in some applications to help maintain a positive head in the inlet line.
- Inspect and clean inlet filters on a regular schedule.
- A pressure gauge is recommended to monitor the inlet pressure and should be mounted AS CLOSE TO THE PUMP INLET as possible. **Short term, intermittent cavitation will not register on a standard gauge.**
- All accessories should be sized to avoid restricting the inlet flow.
- All accessories should be compatible with the solution being pumped to prevent premature failure or malfunction.

### BY-PASS TO INLET

- The standard 5DX pump comes with a Regulating Unloader. This Regulating Unloader has a **built-in by-pass channel** which routes fluid back to the inlet during the by-pass mode. No additional plumbing is required.
- It is critical that a Thermo Valve be installed to protect the pump during prolonged by-pass. The Thermo Valve may be installed on the opposite side of the Manifold Head or by replacing the Flow-Thru Screw with the Flow-Thru Direct Mount Thermo Valve [PN 33920].

## DIAGNOSIS AND MAINTENANCE

PROBLEM	PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> <li>• Low Pressure</li> </ul>	<ul style="list-style-type: none"> <li>• Worn nozzle</li> <li>• Belt slippage</li> <li>• Air leak in inlet plumbing</li> <li>• Pressure gauge inoperative or not registering accurately</li> <li>• Relief valve stuck partially plugged or improperly adjusted</li> <li>• Worn seat or valves</li> <li>• Inlet suction strainer clogged or improperly sized</li> <li>• Worn seals. Abrasives in pumped fluid, severe cavitation; inadequate water supply, stressful inlet conditions</li> <li>• Fouled or dirty inlet or discharge valves</li> <li>• Worn inlet or discharge valves</li> <li>• Leaky discharge hose</li> </ul>	<ul style="list-style-type: none"> <li>• Replace nozzle of proper size.</li> <li>• Tighten or replace; use correct belt.</li> <li>• Use PTFE liquid or tape.</li> <li>• Check pressure with new gauge and replace as needed.</li> <li>• Clean and reset relief valve to system pressure and correct by-pass. Check supply tank for contamination.</li> <li>• Clean or replace with valve kit.</li> <li>• Use adequate size for inlet pump connection and fluid being pumped. Clean frequently.</li> <li>• Install and maintain proper filter, check line size and flow available to pump. Install a C.A.T.</li> <li>• Clean inlet and discharge valve assemblies.</li> <li>• Replace with valve kit.</li> <li>• Replace hose. Check connections.</li> </ul>
<ul style="list-style-type: none"> <li>• Pulsation, pump runs extremely rough, pressure low</li> </ul>	<ul style="list-style-type: none"> <li>• Restricted inlet or air entering inlet plumbing</li> <li>• Stuck inlet or discharge valve</li> </ul>	<ul style="list-style-type: none"> <li>• Check filters and clean as needed. Check fittings and use PTFE liquid or tape for airtight connection.</li> <li>• Clean or replace valve. Check supply tank for contamination.</li> </ul>
<ul style="list-style-type: none"> <li>• Water leakage from under the manifold *Slight leakage</li> </ul>	<ul style="list-style-type: none"> <li>• Worn seals</li> </ul>	<ul style="list-style-type: none"> <li>• Replace with seal kit, check inlet pressure and system temperature, use Thermo Valve in by-pass line; inlet pressure regulator in inlet line.</li> </ul>
<ul style="list-style-type: none"> <li>• Frequent seal replacement</li> </ul>	<ul style="list-style-type: none"> <li>• Excessive heat from prolonged by-pass</li> <li>• Abrasive in fluid</li> </ul>	<ul style="list-style-type: none"> <li>• Install Thermo Valve. Replace seals.</li> <li>• Install inlet filter.</li> </ul>
<ul style="list-style-type: none"> <li>• Oil leak between crankcase and pumping section</li> </ul>	<ul style="list-style-type: none"> <li>• Worn crankcase seals</li> </ul>	<ul style="list-style-type: none"> <li>• Replace crankcase seals.</li> </ul>
<ul style="list-style-type: none"> <li>• Oil leaking in the area of crankshaft</li> </ul>	<ul style="list-style-type: none"> <li>• Worn crankshaft seal</li> <li>• Bad bearing</li> </ul>	<ul style="list-style-type: none"> <li>• Replace damaged seals.</li> <li>• Replace bearing.</li> </ul>
<ul style="list-style-type: none"> <li>• Excessive play in the end of the crankshaft</li> </ul>	<ul style="list-style-type: none"> <li>• Worn bearing</li> </ul>	<ul style="list-style-type: none"> <li>• Replace bearing.</li> </ul>
<ul style="list-style-type: none"> <li>• Water in crankcase</li> </ul>	<ul style="list-style-type: none"> <li>• Humid air condensing into water inside of the crankcase</li> <li>• Leaking of crankcase seals or seals installed backward</li> </ul>	<ul style="list-style-type: none"> <li>• Change oil every 3 months or 500 hour intervals using special CAT PUMP Premium Grade Oil, PN 06100 (Case) 6107 (Bottle), (other approved oil every month or 200 hours).</li> <li>• Replace seals. Follow proper installation procedure. Contact Cat Pumps supplier for crankcase servicing.</li> </ul>
<ul style="list-style-type: none"> <li>• Oil leaking at the rear portion of the crankcase</li> </ul>	<ul style="list-style-type: none"> <li>• Damaged or improperly installed oil gauge, crankcase cover or drain plug O-ring</li> </ul>	<ul style="list-style-type: none"> <li>• Replace oil gauge, crankcase cover or drain plug O-ring. Thread in oil gauge and drain plug hand tight to avoid extruding o-ring.</li> </ul>
<ul style="list-style-type: none"> <li>• Loud knocking noise in pump</li> </ul>	<ul style="list-style-type: none"> <li>• Pulley loose on crankshaft</li> <li>• Worn bearing, connecting rod or crankshaft</li> <li>• Stressful inlet conditions</li> </ul>	<ul style="list-style-type: none"> <li>• Check key and tighten set screw.</li> <li>• Consult Cat Pumps supplier for crankcase servicing.</li> <li>• Install C.A.T.</li> </ul>
<ul style="list-style-type: none"> <li>• Frequent or premature failure of the packing</li> </ul>	<ul style="list-style-type: none"> <li>• Scored plungers</li> <li>• Over pressure to inlet manifold</li> <li>• Abrasive material in the fluid being pumped</li> <li>• Excessive pressure and/or temperature of fluid being pumped</li> <li>• Running pump dry</li> </ul>	<ul style="list-style-type: none"> <li>• Replace plungers.</li> <li>• Reduce inlet pressure per instructions.</li> <li>• Install proper filtration on pump inlet plumbing.</li> <li>• Check pressure and inlet fluid temperature. Be sure they are within specified range.</li> <li>• DO NOT RUN PUMP WITHOUT WATER.</li> </ul>
<ul style="list-style-type: none"> <li>• Strong surging at the inlet and low pressure</li> </ul>	<ul style="list-style-type: none"> <li>• Foreign particles in the inlet or discharge valve or worn inlet and/or discharge valves</li> </ul>	<ul style="list-style-type: none"> <li>• Check for smooth surfaces on inlet and discharge valve seats. Replace with kit if pitted or worn.</li> <li>• Check supply tank for contamination. Install and regularly clean filter. Do not pump abrasive fluids.</li> </ul>