




Model 18580-0000

115 Vac Centri-Puppy

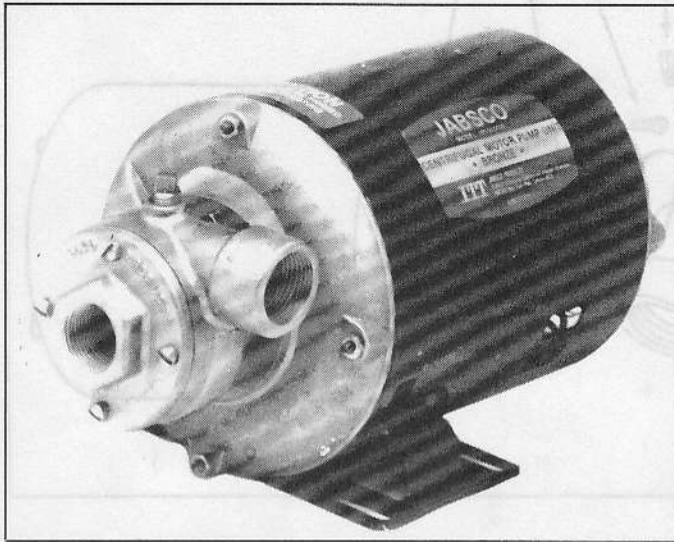

BRONZE CENTRIFUGAL FEATURES

- Volute Body:** Bronze
- Ports—Inlet:** 3/4" NPT
- Discharge:** 3/4" NPT
- Impeller:** Bronze
- Seal:** Lip Type, Viton* Compound
- Motor:** 1/8 HP 115/1/60, 3450 RPM, TENV, 6 Foot, 3 Prong Gounded Plug
- Weight:** 14-1/4 lb (31,5 kg)

Model 18580-0000

⚠ MOTOR WARNING

MOTOR CAN SPARK, EXPLOSION & DEATH CAN OCCUR.
DO NOT USE WHERE FLAMMABLE VAPORS ARE PRESENT.

DESCRIPTION

The ITT Jabsco bronze centrifugal pump is designed for continuous duty service. The close coupled, compact motor pump unit is equipped with a ball bearing motor and stainless steel shaft and has a service factor of 1.5 or greater. The Centri-Puppy is equipped with a Viton lip seal for applications versatility. Unlike ITT Jabsco flexible impeller pumps, the centrifugal pump is not self-priming. Normal installation is flooded suction, that is, with the pump below the source liquid level so that liquid flows by gravity to the pump. The pump may be located above the liquid source, if a check valve or foot valve is installed at the beginning of the suction line; and, the pump and entire suction line is filled with liquid; and, all air is bled from the suction side when primed and will maintain its prime, as long as the foot or check valve functions as it should, without leaking. If the check valve leaks, the pump will not reprime, and must be manually primed in order to resume operation.



Published performance curves are based on pumping water at 68 degrees F. The motor horsepower is sufficient to provide full open discharge capacity at three (3) feet of head. As the head (pressure) against which the pump operates increases, the load on the motor decreases, thus the discharge may be throttled without danger of overloading the motor. Liquids of higher specific gravity (weight) than water require more power to generate the same performance available with water. The horsepower requirement increases directly as the increase in specific gravity.

It is not possible to increase the horsepower of a close coupled motor pump unit, therefore, to pump a liquid of higher specific gravity, with the centrifugal motor pumps, the capacity must be limited by restricting the discharge to stay within the horsepower available. In other words, the discharge must be throttled to the extent that the motor full load amperage rating, found on the motor label, is not exceeded. Contact factory for application engineering assistance.


Viton* is a trademark of E. I. Du Pont de Nemours and Company.

In all installations, make sure the suction is not restricted. Do not use an elbow fitting in the pump intake port. Starved suction can result in cavitation which will damage the pump and cause performance deterioration.

Viscous or thick liquids are difficult to pump with a small centrifugal pump. Do not attempt to pump liquids with a viscosity exceeding 1500 SSU (SAE 30 WT OIL at 75 degrees F) with a centrifugal pump. Consider, instead, the ITT Jabsco flexible impeller pump or gear pump.

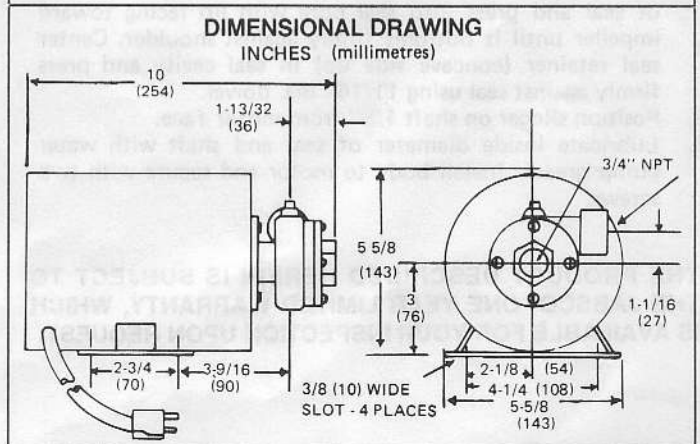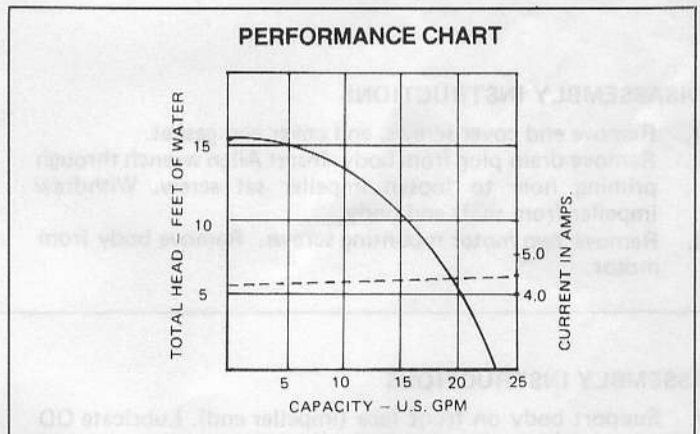

EXPLODED VIEW

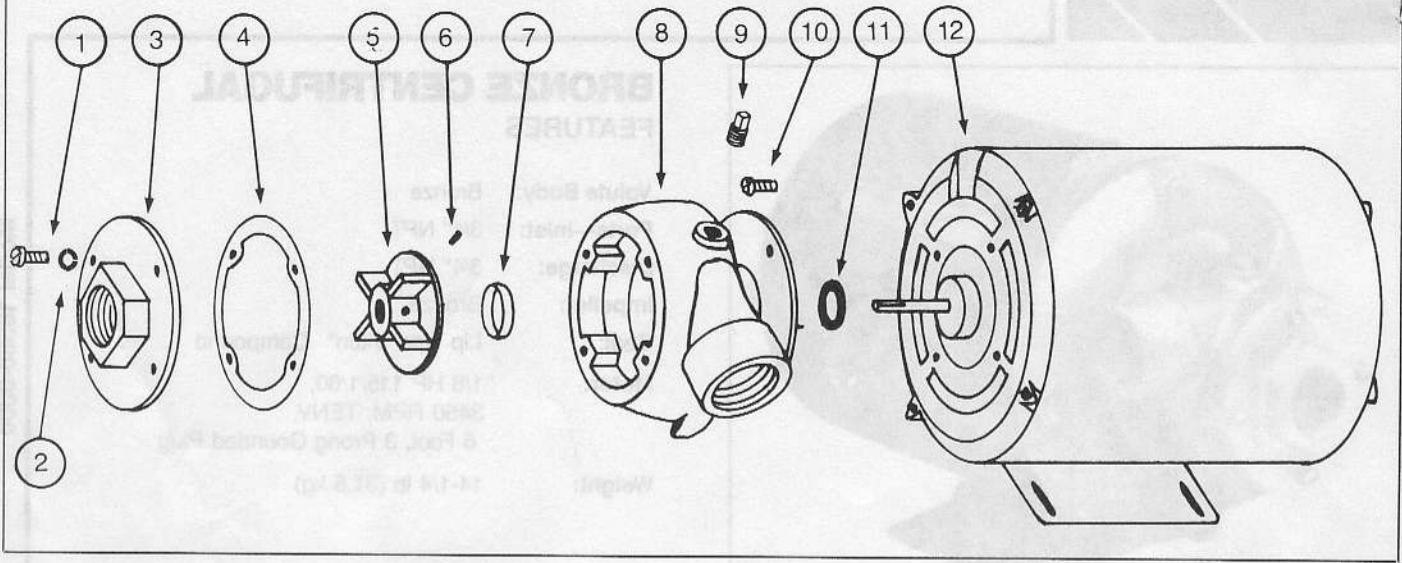

PARTS LIST

KEY	DESCRIPTION	PART #	QTY.	KEY	DESCRIPTION	PART #	QTY.
1	Screw End Cover	91003-0230	4	7	Seal	1040-0001	1
2	Lock Washer	91602-0020	4	8	Body - Volute	18513-0000	1
3	End Cover	18514-0000	1	9	Plug	92650-0040	1
4	Gasket	18516-0000	1	10	Screw - Motor Mtg.	98019-0020	2
5	Impeller	18515-0000	1	11	Slinger	6342-0000	1
6	Set Screw - Impeller	91083-0040	1	12	Motor - TENV 115/1/60	18753-0082	1

DISASSEMBLY INSTRUCTIONS

1. Remove end cover screws, end cover and gasket.
2. Remove drain plug from body. Insert Allen wrench through priming hole to loosen impeller set screw. Withdraw impeller from shaft and body.
3. Remove two motor mounting screws. Remove body from motor.

4. Press seal out of body towards motor flange end. Check motor shaft for wear in seal lip area. Replace motor if shaft is deeply grooved. This will only happen, normally, if pump is run dry for extended periods.

ASSEMBLY INSTRUCTIONS

1. Support body on front face (impeller end). Lubricate OD of seal and press into seal bore with lip facing toward impeller until it bottoms firmly against shoulder. Center seal retainer (concave side up) in seal cavity and press firmly against seal using 11/16" dia. dowel.
2. Position slinger on shaft 1/8" from motor face.
3. Lubricate inside diameter of seal and shaft with water pump grease. Install body to motor and secure with two screws.

4. Start set screw into impeller boss. Push impeller on shaft with set screw centered on shaft flat, until impeller contacts rear face of body. Pull impeller away from body 1/32" and tighten set screw by inserting Allen wrench through priming hole in body. Turn impeller to make sure there is no metal contact.
5. Install gasket, end cover and secure with four end cover screws.
6. Install priming plug in body with a light coat of sealant.

THE PRODUCT DESCRIBED HEREIN IS SUBJECT TO THE JABSCO® ONE YEAR LIMITED WARRANTY, WHICH IS AVAILABLE FOR YOUR INSPECTION UPON REQUEST.

ITT Jabsco

ITT Fluid Technology Corporation
 1485 Dale Way, P.O. Box 2158, Costa Mesa, CA 92628-2158
 Tel: (714) 545-8251; Fax: (714) 957-0609
 Bingley Road, Hoddesdon, Hertfordshire EN11 0BU England
 Tel: 0992-467191; Tlx: 263251 G; Fax: 0992-467132